

Order P/N	6 digit P/N	Description	Brand	Series	SIB
83 30 0 1AB BF6		Test of new tool PN system	BMW		
81 30 2 465 104		7mm screws	BMW	ALL,	
83 30 2 459 457		Counter Bracket	BMW	G20,	04 09 20
83 30 2 457 925		Fixture seal remover	BMW	F48,	
83 30 2 475 322		Range Extender Lifter	BMW	I01,	
83 30 2 464 950		Headlight Removal wrench	BMW	G29,	
83 30 0 495 756	130 190	Injector Assembly Set	MINI	ALL,	
83 30 2 462 837		Timing chain supplementary set	BMW	ALL,	
83 30 2 462 828		Timing chain riveting set	BMW	ALL,	
83 30 5 169 0		Spider Windshield update kit	BMW	ALL,	
83 30 2 471 857		Wrench	BMW	G29,	
83 30 5 A0B 522		8HP Transmission Park Release Tool	BMW	ALL,	
83 30 2 471 407		Wheel Balancing Adapter	MINI	F56,	
61 13 2 470 939		Wiring Harness Repair Kit	BMW	ALL,	04 01 20
83 30 2 472 196		Swivel Bearing R&R tool	BMW	F97,	
83 30 2 471 858		Thrust Piece	BMW	F97,	
81 43 5 085 69		Windshield cutting Cord - P8	BMW	ALL,	
83 30 2 468 560		Crankshaft rotation tool	BMW	ALL,	04 19 19
83 30 2 467 369		Headlight Plug Tool	BMW	ALL,	04 18 19
83 30 2 468 039		Thrust Piece	BMW	G05,	
83 30 2 464 361		Support	BMW	G01,	
83 30 2 464 360		spacer	BMW	G01,	
83 30 2 464 359		sleeve	BMW	G01,	
83 30 2 464 358		thrust piece	BMW	G01,	
83 30 2 464 357		sleeve	BMW	G01,	
83 30 2 464 356		Spacer	BMW	G01,	
83 30 2 464 362		thrust piece	BMW	G01,	
83 30 2 464 355		Thrust piece	BMW	G01,	
83 30 2 464 363		puller	BMW	G01,	
83 30 2 469 240		socket wrench insert set	BMW	ALL,	04 03 20
83 30 2 450 691		Torx Bit	BMW	ALL,	
83 30 2 352 991		32 pin test cable	BMW	G12,	04 33 15
83 30 2 471 014		Pressure Testing Cap	MINI		04 04 19
83 30 2 471 014		Pressure Testing Cap	BMW		04 17 19
83 30 2 451 774		32 pin adapter cable	BMW	G12,	
83 30 2 451 775		54 pin adapter cable	BMW	G12,	
83 30 2 451 776		64 pin adapter cable	BMW	G12,	
83 30 2 450 246		Support Bearing Plate	BMW	G30,	04 16 19
83 30 2 472 903		Torx Socket T60	BMW	ALL,	04 04 20
81 39 2 361 943		Transport Mode Switch	BMW	ALL,	04 22 14
83 30 2 466 467		Turbo Chains	BMW	G07,	04 14 19
83 30 2 464 938		Template	BMW	G20,	
83 30 2 411 194		Test harness	BMW	ALL,	
83 30 2 407 626		Pressure adapter	BMW	ALL,	
83 30 2 469 932		MSD/MSV Test Cable 88 Pin	BMW	ALL,	04 12 19
83 30 2 469 929		MEVD Test Cable 24 Pin	BMW	ALL,	04 12 19
83 30 2 463 352		Wiper Arm Adjustment Tool Update Kit	BMW	ALL,	04 13 19
83 30 2 469 931		MSD/MSV Test Cable 10 Pin	BMW	ALL,	04 12 19
83 30 2 469 928		MEVD Test Cable 24 Pin	BMW	ALL,	04 12 19
83 30 2 468 297		MEVD Test Cable 24 Pin	BMW	ALL,	04 12 19
83 30 2 466 581		DME8 Test Cable 24 Pin	BMW	ALL,	04 12 19
83 30 2 459 012		Holder	BMW	ALL,	04 10 19
83 30 2 463 965		Oil Pump Sprocket Tool	BMW	ALL,	04 10 19
83 30 2 445 958		Gas Tank Lid Tool	MINI	ALL,	
83 30 2 445 958		Gas Tank Lid tool - small	BMW	ALL,	
83 30 2 469 803		Cartridge gun	BMW	ALL,	
83 30 2 471 299		Gudgeon pin tool	BMW	ALL,	
83 30 2 459 458		Centering pins	BMW	ALL,	
83 30 2 338 466		ACC wheel adapter	BMW	ALL,	
83 30 2 469 253		AC Evap Flush adapter	BMW	G01,	
83 30 2 469 255		Adapter Evap Pressure test	BMW	G01,	04 11 19
83 30 2 471 555		Expanding Collet	BMW	E93,	04 12 07
83 30 2 448 805		24 pin connection cable	BMW	F15,	
83 30 0 496 816	540 060	Soft top frame	BMW		
81 39 2 466 560		Coolant jug - spare	BMW		
83 30 2 465 583		Top support plate	BMW	G14,	
83 30 2 461 260		Soft top stand	BMW	G14,	
83 30 2 469 692		PQ & MPQ Wire contact crimping head	BMW	ALL,	04 09 19
83 30 2 469 691		PQ wire crimp head	BMW		04 09 19
83 30 0 495 827	234 150	Transmission support	BMW		
83 30 2 458 483		Strut centering ring	BMW	G01,	04 08 19
83 30 2 464 898		Open end spanner - drive shaft	BMW	G01,	04 07 19

Order P/N	6 digit P/N	Description	Brand	Series	SIB
83 30 2 466 729		Vibration Damper Alignment Pins	BMW		04 05 19
83 30 2 463 684		Punch for PDC Sensor	BMW	F30,	04 06 19
83 30 2 458 076		Bearing measurement tool	BMW	ALL,	
83 30 2 465 042		Laptop safety holder	BMW	ALL,	
81 29 2 410 274		Vacuum Adapter	BMW		
83 30 2 456 786		Head Airbag Clip Release	BMW		04 02 19
36 13 6 765 545		G07 SEAT BOLT TOOL	BMW	G07,	
81 10 0 422 196		Rear Camera Adjustment Tool	BMW	E70,	04 05 07
83 30 2 468 102		Borescope	BMW	ALL,	
83 30 2 458 279		Charge Cable	BMW	ALL,	
83 30 2 339 646		Crimping pliers	BMW	ALL,	
83 30 2 413 239		Punch Kit	BMW	ALL,	
83 30 2 455 997		Oil fill tool	BMW	ALL,	
83 30 2 406 181		Seal Installer	BMW	ALL,	
83 30 2 406 191		Seal Installer	BMW	ALL,	
83 30 2 407 561		Seal installer	BMW	ALL,	
83 30 2 413 237		Flushing adapter kit	BMW	ALL,	
81 43 2 464 386		M5 pull in mandrel	BMW	ALL,	
83 30 2 356 947		Lifting straps	BMW	ALL,	
83 30 2 460 340		oil fill kit	BMW	ALL,	
83 19 2 359 263		Drill Bit 4.2	BMW	ALL,	
83 19 2 359 262		Drill bit 6.8	BMW	ALL,	
83 19 2 460 425		Drill Bit 6.8	BMW	ALL,	
83 19 2 460 424		Drill Bit 4.2	BMW	ALL,	
83 30 2 410 242		Compression Adapter	BMW	ALL,	
83 30 2 458 501		Adapter	BMW	ALL,	
83 30 2 462 970		Input Shaft Seal Installer	BMW	ALL,	
83 30 2 458 114		Extractor	BMW	ALL,	
83 30 2 457 644		Test Cable - 67 pin	BMW	ALL,	
83 30 2 457 584		Test Cable 41 pin	BMW	ALL,	
83 30 2 412 176		Evaporative Leak Test Adapter	BMW	ALL,	
83 30 2 462 121		Locating tool	BMW	ALL,	
83 30 0 496 595	116 130	Flywheel holder.	BMW	ALL,	
83 30 0 492 104	331 308	Thrust adapter	BMW	ALL,	
83 30 0 492 878	616 043	Test Cable	BMW	ALL,	
81 69 2 355 210		Safety Gear	BMW	ALL,	
83 30 0 496 533	002 328	Engine Adapters	BMW	ALL,	
83 30 2 457 168		132 Pin Break Out Box	BMW	ALL,	
83 30 2 407 656		AC Leak test adapters	BMW	ALL,	
83 30 2 455 965		Oil filter wrench	BMW	ALL,	
83 30 2 461 309		Engine Oil Drain Plug Repair Tool	BMW	ALL,	
83 30 2 455 002		Adapter	BMW	ALL,	
83 30 0 003 105		Adapter	BMW	ALL,	
83 30 2 455 010		Engine Mount	BMW	ALL,	
83 30 2 456 465		Protective Caps	MINI	ALL,	
83 30 2 455 654		Tensioning Tool	MINI	ALL,	
83 30 2 448 401		Assembly Aid	MINI	ALL,	
83 30 2 452 959		Pliers	MINI	ALL,	
83 30 2 456 372		Gauge	MINI	ALL,	
83 30 2 455 172		Spacers	MINI	ALL,	
83 30 2 455 245		Measuring Adapter	BMW	ALL,	
83 30 2 411 399		Timing Chain Tensioner	BMW	ALL,	
83 30 2 449 661		High Voltage Adapter	BMW	ALL,	
83 30 0 492 880	616 045	Test Cable	BMW	ALL,	
83 30 2 359 907		Cell Module Charger	BMW	ALL,	
83 30 2 456 428		Lifting frame	BMW	ALL,	
83 30 0 444 759		4mm reamer	BMW	ALL,	
83 30 0 495 324	610 202	Pliers	BMW	ALL,	
83 30 2 152 837		Adapter Cable	BMW	ALL,	
83 30 2 445 267		Adapter	BMW	ALL,	
83 30 2 445 323		Adapter plate	BMW	ALL,	
83 30 2 444 012		Adapter	BMW	ALL,	
83 30 2 458 651		TTemplate	BMW	ALL,	
83 30 2 457 963		adapter	BMW	ALL,	
83 30 2 456 679		Pre-Tensioning tool	BMW	ALL,	
83 30 2 352 995		24 pin test cable DEE2	BMW	ALL,	
83 30 2 451 773		adapter cable	BMW	ALL,	
83 30 2 407 625		EOS adapter box cable	BMW	ALL,	
83 30 2 413 564		Rollover Adapter	MINI	ALL,	
83 30 2 409 230		Seal tool	MINI	ALL,	
83 30 2 458 587		Siphone hose	MINI	ALL,	
83 30 2 452 307		Radial Shaft Seal Repair Kit	MINI	ALL,	

Order P/N	6 digit P/N	Description	Brand	Series	SIB
83 30 2 458 588		siphon kit	BMW	ALL,	
83 30 2 458 587		Siphon kit	BMW	ALL,	
83 30 2 456 828		Tire valve torque wrench	BMW	ALL,	
83 30 2 412 607		Spring Protector	BMW	ALL,	
83 30 2 456 244		multi Point socket	BMW	ALL,	
83 30 2 449 464		Installation aid	MINI	ALL,	
83 30 2 457 051		Radial shaft seal mandrel	BMW	ALL,	
83 30 2 450 247		Driveshaft Centering Bushing tool	BMW	ALL,	
83 30 2 318 446		Line Puller	BMW	ALL,	
83 30 0 496 766		Adapter Hose	BMW	ALL,	
83 30 2 412 858		striking tool	BMW	ALL,	
83 30 2 455 957		mount installer	BMW	ALL,	
83 30 2 455 956		Mount installation tool	BMW	ALL,	
83 30 2 413 106		Fuel system caps	BMW	ALL,	
83 30 2 444 847		Fuel Lid door air cushion	BMW	ALL,	
83 30 2 452 189		Fuel Tank lid wrench	BMW	ALL,	
83 30 2 451 701		Turbo alignment tool	BMW	ALL,	
83 30 2 412 613		TENSIONING TOOL	BMW	ALL,	
83 30 2 413 109		holding sleeve	BMW	ALL,	
83 30 2 411 601		Synchronizing key	BMW	ALL,	
83 30 2 410 976		Synchronizing key	BMW	ALL,	
83 30 2 410 729		Holding sleeve	BMW	ALL,	
83 30 2 450 364		Door Handle Torx	BMW	ALL,	
83 30 2 444 402		Punch Tool	BMW	ALL,	
83 30 2 444 403		Punch Tool	BMW	ALL,	
83 30 2 414 691		Engine support bar	BMW	ALL,	
81 43 2 452 010		Convertible top support	BMW	ALL,	
83 30 2 448 957		Camshaft Adjustment Tool	BMW	ALL,	
83 30 2 358 470		Clutch alignment tool	MINI	ALL,	
83 30 2 302 783		DEF filler hose	BMW	ALL,	
83 30 2 411 757		AC spray lance	BMW	ALL,	
83 30 2 413 653		AC spray Lance	BMW	ALL,	
83 30 2 344 001		AC spray lance	BMW	ALL,	
83 30 2 222 502		AC spray lance	BMW	ALL,	
83 30 0 494 960	641 260	Spray Lance AC	BMW	ALL,	
83 30 0 495 515	641 280	AC Spray Lance	BMW	ALL,	
83 30 2 450 487		Vanos central valve tool	MINI	ALL,	
83 30 2 450 487		Vanos Central Bolt/Valve tool	BMW	ALL,	
83 30 2 413 236		AC Flushing kit	BMW	ALL,	
83 30 2 457 555		Brake Rotor Gauge Kit	BMW	ALL,	
83 30 0 002 877		Mandrel	BMW	ALL,	
83 30 2 451 557		TDC Pin	BMW	ALL,	
83 30 2 451 118		Awl	BMW	ALL,	
83 30 2 454 246		Valve block	BMW	ALL,	
83 30 2 420 355		Oil pressure adapter	BMW	ALL,	
83 30 2 445 327		Removal and Instalation kit	BMW	ALL,	
83 30 2 448 914		Pump removal tool	BMW	ALL,	
83 30 2 492 908	619 040	Crimping pliers set	BMW	ALL,	
83 30 2 409 665		Bladder Plug Tool	BMW	ALL,	
83 30 2 448 366		Locating fixture	BMW	ALL,	
83 30 2 446 919		Turbocharger Alignment tool	BMW	ALL,	
83 30 2 444 999		Torx socket	BMW	ALL,	
83 30 2 452 007		Protective matt	BMW	ALL,	
83 30 2 450 405		Head airbag clip tool	BMW	ALL,	
83 30 2 450 245		Anti-Tamper Socket	BMW	ALL,	
00 00 0 000 001	000 001	test	BMW	ALL,	
83 30 0 496 855		Reversible insert ratchet	BMW	ALL,	
83 30 2 447 480		Injector Puller Adapter Plate	BMW	ALL,	
83 30 2 359 613		Leak test plugs	BMW	ALL,	
81 34 2 414 406		High Pressure AC adapter	BMW	ALL,	
83 30 0 495 862	335 140	Seal In staller	BMW	ALL,	
83 30 2 412 506		Spring Cup (Top)	BMW	ALL,	
83 30 2 412 505		Spring cup bottom	BMW	ALL,	
83 30 2 445 036		Spring Clamping Plate Kit	BMW	ALL,	
83 30 2 405 614		Oil Fill Tool	BMW	ALL,	
83 30 0 492 359	334 040	Puller	BMW	E30,	
83 30 0 492 368	334 049	Guide sleeve	BMW	E36,	
83 30 0 492 369	334 050	Drift	BMW	E30,	
83 30 0 492 371	334 070	Adapter	BMW	E28,	
83 30 0 492 373	334 090	Puller	BMW	E30,	
83 30 0 493 705	341 040	Allen wrench	BMW	E31,	
83 30 0 492 569	416 100	Torx socket	BMW	E31,	

Order P/N	6 digit P/N	Description	Brand	Series	SIB
83 30 0 492 581	511 040	Pin wrench	BMW	E34,	
83 30 0 492 596	512 070	Pin wrench	BMW	E32,	
83 30 0 492 601	512 120	Support	BMW	E30,	
83 30 0 492 611	513 030	Windshield gauge	BMW	E36,	
83 30 0 492 634	513 080	Window scale	BMW	E31,	
83 30 0 492 671	521 200	Seat rail clamp	BMW	E36,	
83 30 0 492 689	543 150	Locking pins	BMW	E31,	
83 30 0 494 066	611 451	26 pin adapter cable- yellow	BMW	E32,	
83 30 0 494 067	611 452	26 pin adapter - white	BMW	E32,	
83 30 0 494 068	611 453	26 pin adapter cable - blue	BMW	E32,	
83 30 0 494 069	611 454	26 pin adapter cable- green	BMW	E32,	
83 30 0 494 072	611 457	26 pin test cable	BMW	E32,	
83 30 0 492 785	611 481	26 pin adapter cable-green	BMW	E32,	
83 30 0 492 786	611 482	26 pin adapter cable - white	BMW	E32,	
83 30 0 492 787	611 483	26 pin adapter cable - Beige	BMW	E32,	
83 30 0 492 788	611 484	26 pin test cable-brown/grey	BMW	E32,	
83 30 0 492 797	612 020	frequency simulator cable	BMW	E32,	
83 30 0 492 799	612 040	Infra-red test cable	BMW	E34,	
83 30 0 492 800	612 050	Servotronic test cable	BMW	E34,	
83 30 0 492 841	614 440	Microswitch test box	BMW	E30,	
83 30 0 492 851	614 490	2.5mm adapter cable	BMW	E31,	
83 30 0 492 852	615 410	5 pin adapter cable	BMW	E31,	
83 30 0 492 857	616 010	T80 torx wrench	BMW	E31,	
83 30 0 493 036	621 250	Airbag plug	BMW	E23,	
83 30 0 493 038	621 270	Ignition cable	BMW	E23,	
83 30 0 493 040	621 290	20 Pin SRS reset tool	BMW	E30,	
83 30 0 493 049	630 010	Headlight wrench	BMW	E31,	
83 30 0 493 051	630 030	Headlamp gauge	BMW	E31,	
83 30 0 493 055	630 110	Socket wrench	BMW	E31,	
83 30 0 493 058	630 113	Headlight adjuster 17MM	BMW	E31,	
83 30 0 490 150	002 140	T20 torx bit	BMW	E38,	
83 30 0 490 518	009 260	Wiper arm adjuster	BMW	E39,	
83 30 0 490 526	009 300	Grill removal tool	BMW	E39,	
83 30 0 490 897	112 480	Engine support	BMW	E32,	
83 30 0 491 969	315 000	Fixture	BMW	E30,	
83 30 0 491 978	315 070	Measuring tool	BMW	E30,	
83 30 0 491 982	315 090	Puller	BMW	E30,	
83 30 0 491 975	315 040	Washer	BMW	E30,	
83 30 0 491 976	315 050	Thrust sleeve	BMW	E30,	
83 30 0 491 977	315 060	Shaft adaptor	BMW	E30,	
83 30 0 491 981	315 080	Gauge disc	BMW	E30,	
83 30 0 491 983	315 100	Installer	BMW	E30,	
83 30 0 491 814	261 060	46mm wrench	BMW	E30,	
83 30 0 491 819	271 000	Fixture	BMW	E30,	
83 30 0 491 829	271 120	Sleeve	BMW	E30,	
83 30 0 491 831	271 190	Installer	BMW	E30,	
83 30 0 491 923	312 155	Fixture	BMW	E30,	
81 12 9 427 824		Exhaust adapters	BMW	E32,	
83 30 0 491 642	240 130	Transmission adapter	BMW	E32,	
83 30 0 494 826	311 140	Ball joint wrench	BMW	E83,	04 28 03
83 30 0 494 807	312 300	Thrust rod remover	BMW	E83,	04 28 03
83 30 2 213 041	313 383	Spring holder	BMW	E83,	04 28 03
83 30 0 490 480	005 600	Gas spring compressor	BMW	E30,	
83 30 0 492 075	331 030	Mounting bracket	BMW	E32,	
83 30 0 492 584	511 061	Plier jaws	BMW	E30,	
83 30 0 490 755	111 420	Pressure fixture	BMW	E32,	
83 30 0 490 505	009 150	Sealing pliers	BMW	E30,	
83 30 0 492 238	333 150	Press	BMW	E31,	
83 30 0 492 248	333 170	Press	BMW	E31,	
83 30 0 492 256	333 190	Press	BMW	E31,	
83 30 0 492 260	333 200	Press	BMW	E31,	
83 30 0 493 325	323 140	Camber Adjustment Tool	BMW	E46,	04 12 99
83 30 0 493 624	416 120	Door Glass adjustment tool	BMW	E46,	04 10 99
83 30 0 493 694	333 230	bushing remover	BMW	E53,	04 50 99
83 30 0 493 653	323 160	crowfoot wrench	BMW	E53,	04 50 00
83 30 0 493 648	332 150	shaft remover	BMW	E53,	04 50 99
83 30 0 494 787	510 040	Engine hood support	BMW	E83,	04 28 03
83 30 0 493 645	334 158	mount remover	BMW	E53,	04 50 99
83 30 0 492 310	333 310	Press	BMW	E31,	
83 30 0 490 566	110 010	Spacer	BMW	E31,	
83 30 0 491 800	251 110	Spanner	BMW	E31,	
83 30 0 491 442	230 040	Transmission cradle	BMW	E31,	

Order P/N	6 digit P/N	Description	Brand	Series	SIB
83 30 0 491 776	245 300	Transmission cradle	BMW	E36,	
83 30 0 492 302	333 290	Support jig	BMW	E36,	
83 30 0 492 449	334 390	Support Stand	BMW	E36,	
83 30 0 492 306	333 300	Support	BMW	E31,	
83 30 0 492 802	612 070	Power lead	BMW	E31,	
83 30 0 492 337	333 410	Spreader bar	BMW	E31,	
83 30 0 491 671	241 180	Assembly tool	BMW	E34,	
83 30 0 491 675	241 220	Support	BMW	E34,	
83 30 0 491 645	240 151	Pressure screw	BMW	E34,	
83 30 0 491 797	246 060	16 pin test cable	BMW	E38,	
83 30 0 494 767	613 080	Transfer case test cable	BMW	E83,	04 28 03
83 30 0 492 316	333 316	Puller	BMW	E31,	
83 30 0 491 595	232 470	Drift	BMW	E31,	
83 30 0 491 596	232 480	Drift	BMW	E31,	
83 30 0 491 597	232 490	Drift	BMW	E31,	
83 30 0 491 600	233 010	Press	BMW	E31,	
83 30 0 491 604	233 020	Installer	BMW	E31,	
83 30 0 494 768	613 090	Transfer case test adapter	BMW	E83,	04 28 03
83 30 0 491 168	127 130	Extension	BMW	E31,	
83 30 0 494 769	613 130	Airbag adapter cable MRS4	BMW	E83,	04 28 03
83 30 0 492 805	612 073	Test cable	BMW	E38,	
83 30 0 491 942	312 270	Press	BMW	E39,	
83 30 0 492 426	334 180	Press	BMW	E39,	
83 30 0 490 525	009 280	Navigation calibrator	BMW	E39,	
83 30 0 492 654	514 000	Headliner installation gauge	BMW	E38,	
83 30 0 494 805	312 246	Ball joint press	BMW	E53,	04 01 04
83 30 0 492 822	613 030	Yaw sensor cable	BMW	E38,	
83 30 0 492 459	341 130	Dust cap	BMW	E39,	
83 30 0 493 151	651 100	Radio removal tool	BMW	E38,	
83 30 0 494 823	271 420	Seal installer	BMW	E53,	04 01 04
83 30 0 492 854	616 001	Wiper arm remover	BMW	E38,	
83 30 0 492 053	323 090	Ball joint press modification	BMW	E46,	04 32 03
83 30 0 493 179	323 040	Steering angle sensor guide	BMW	E46,	04 10 98
83 30 0 495 291	323 130	Steering shaft guide	BMW	E46,	04 10 98
83 30 0 493 308	612 074	Seat test cable	BMW	E46,	04 10 98
83 30 0 493 311	350 012	Kickdown gauge	BMW	E38,	
83 30 0 493 326	345 160	DSC3 socket	BMW	E38,	
83 30 0 491 417	212 070	Clutch Gauge	BMW	E36,	
83 30 0 493 222	616 200	Washer jet adjuster	BMW	E39,	
83 30 0 494 887	543 120	Lid support	BMW	E64,	04 18 04
83 30 0 494 869	543 110	Lifting frame	BMW	E64,	04 18 04
83 30 0 493 283	113 244	Camshaft retainer	BMW	E46,	
83 30 0 493 130	116 150	Adjustment plate	BMW	E46,	
83 30 0 493 134	116 170	Sealing cap pliers	BMW	E46,	
83 30 0 493 243	116 180	Secondary sprocket fixture	BMW	E46,	
83 30 0 493 186	614 390	60 pin break out box	BMW	E46,	04 05 98
83 30 0 493 125	613 210	5 pin V adapter cable	BMW	E46,	04 05 98
83 30 0 493 126	613 220	8 pin V adapter cable	BMW	E46,	04 05 98
83 30 0 493 128	613 240	8 pin V adapter cable	BMW	E46,	04 05 98
83 30 0 493 182	611 260	30 pin V adapter cable	BMW	E46,	04 05 98
83 30 0 493 185	611 270	24 pin V adapter cable	BMW	E46,	04 05 98
83 30 0 493 184	613 150	54 pin V adapter cable	BMW	E46,	04 05 98
83 30 0 493 136	345 220	25 pin V adapter cable	BMW	E46,	04 05 98
83 30 0 493 137	345 230	43 pin V adapter cable	BMW	E46,	04 05 98
83 30 0 493 284	312 156	Control arm brace	BMW	E46,	04 04 98
83 30 0 493 289	313 129	Spring retainer	BMW	E46,	04 04 98
83 30 0 493 290	313 101	Spring retainer insert	BMW	E46,	04 04 98
83 30 0 493 306	323 030	Rear toe adjustment tool	BMW	E46,	04 04 98
83 30 0 493 227	333 370	Rear axle bushing remover	BMW	E46,	04 04 98
83 30 0 493 172	333 390	Rear diff. seal installer	BMW	E46,	04 04 98
83 30 0 493 181	333 400	Rear diff. seal installer	BMW	E46,	04 04 98
83 30 0 493 200	512 160	Engine hood brace	BMW	E46,	04 04 98
83 30 0 493 176	641 010	Heater control removers	BMW	E46,	04 04 98
83 30 0 492 562	415 030	Door gauges	BMW	E36,	
83 30 0 492 597	512 080	Door contact gauge	BMW	E36,	
83 30 0 492 693	543 420	Microswitch gauge	BMW	E30,	
83 30 0 492 692	543 410	Pin wrench	BMW	E30,	
83 30 0 492 842	614 450	20 pin test cable	BMW	E30,	
83 30 0 493 052	630 000	Alignment lids	BMW	E31,	
83 30 0 492 497	345 050	Jumper plug	BMW	E32,	
83 30 0 491 970	315 010	Puller/adapter	BMW	E30,	
83 30 0 491 973	315 020	Seal driver	BMW	E30,	

Order P/N	6 digit P/N	Description	Brand	Series	SIB
83 30 0 491 974	315 030	Seal driver	BMW	E30,	
83 30 0 491 897	312 090	Drive flange extractor	BMW	E30,	
83 30 0 491 895	312 070	Thrust sleeve	BMW	E30,	
83 30 0 491 830	271 160	Bushing driver	BMW	E30,	
83 30 0 491 828	271 090	Seal driver	BMW	E30,	
83 30 0 492 507	345 150	Adjusting gauge	BMW	E30,	
83 30 0 492 029	322 120	Gauge	BMW	E32,	
83 30 0 491 815	261 070	Puller plate	BMW	E32,	
83 30 0 495 579	135 255	Steering Shaft Adapter	BMW	E85,	04 31 06
83 30 0 494 410	233 150	Shaft seal tool set	BMW	E85,	04 24 02
83 30 0 494 416	233 160	Shaft seal tool set	BMW	E85,	04 24 02
83 30 0 494 468	321 280	Hydraulic motor clamp	BMW	E85,	04 24 02
83 30 0 494 469	323 180	Clamp	BMW	E85,	04 24 02
83 30 0 494 474	512 195	Door lock jig	BMW	E85,	04 24 02
83 30 0 494 450	513 260	Release slide	BMW	E85,	04 24 02
83 30 0 493 955	612 110	21 pin test cable	BMW	E65,	04 08 02
83 30 0 493 954	612 120	16 pin test cable	BMW	E65,	04 08 02
83 30 0 493 950	612 150	76 pin test cable	BMW	E65,	04 08 02
83 30 0 493 945	612 190	20 Pin test cable	BMW	E65,	04 08 02
83 30 0 494 157	614 310	16 Pin test cable	BMW	E65,	04 08 02
83 30 0 493 952	631 030	16 Pin test cable	BMW	E65,	04 08 02
83 30 0 493 953	612 130	10 Pin test cable	BMW	E65,	04 30 01
83 30 0 493 948	612 160	4 Pin test cable	BMW	E65,	04 30 01
83 30 0 493 947	612 170	5 pin adapter cable	BMW	E65,	04 30 01
83 30 0 493 946	612 180	8 pin test cable	BMW	E65,	04 30 01
83 30 0 494 165	612 200	8 pin extension cable	BMW	E65,	04 30 01
83 30 0 495 580	324 270	Steering shaft installer	BMW	E85,	04 31 06
83 30 0 493 956	372 040	12 pin adapter cable	BMW	E65,	04 30 01
83 30 0 493 958	324 250	8 pin adapter cable	BMW	E65,	04 30 01
83 30 0 494 128	361 460	32 pin test vcable	BMW	E65,	04 30 01
83 30 0 494 155	372 050	10 pin adapter cable	BMW	E65,	04 30 01
83 30 0 494 401	543 200	Folding top support	BMW	E85,	04 31 02
83 30 0 493 915	127 300	9 Pin adapter cable	BMW	E65,	04 05 02
83 30 0 493 916	127 310	10 Pin test cable	BMW	E65,	04 05 02
83 30 0 493 917	127 320	23 Pin test cable	BMW	E65,	04 05 02
81 47 0 144 363		Universal front cover	BMW	E39,	04 02 02
83 30 0 494 602	613 060	Power Window Test Lead	BMW	E60,	04 22 03
83 30 0 494 280	212 200	Clutch centering pin	BMW	E85,	04 28 02
83 30 0 494 436	212 220	Spline cleaner	BMW	E85,	04 28 02
83 30 0 494 449	000 451	Support Feet	BMW	E85,	04 28 02
83 30 0 494 439	230 134	Transmission support	BMW	E85,	04 28 02
83 30 0 491 984	315 110	Output Shaft Remover	BMW	E53,	04 51 02
83 30 0 494 612	612 220	DSC Test Lead	BMW	E60,	04 14 03
83 30 0 494 613	612 230	AFS Test Lead	BMW	E60,	04 14 03
83 30 0 494 453	613 040	EKP Test Lead	BMW	E60,	04 14 03
83 30 0 494 645	512 220	T25 Torx Driver	BMW	E60,	04 14 03
83 30 0 494 627	520 070	Release Hook	BMW	E60,	04 14 03
83 30 0 494 642	170 113	Coolant System Adapters	BMW	E60,	04 14 03
83 30 0 494 506	242 400	Seal Drift	BMW	E60,	04 14 03
83 30 0 494 643	170 114	Coolant System Adapters	BMW	E60,	04 14 03
83 30 0 494 656	323 190	Camber Adjustment Tool	BMW	E60,	04 14 03
83 30 0 494 655	324 150	AFS Gauge	BMW	E60,	04 14 03
83 30 0 494 584	330 170	ARS Gauge	BMW	E60,	04 14 03
83 30 0 494 654	334 270	Bushing Tool	BMW	E60,	04 14 03
81 34 2 153 237	641 240	AC System Adapter	BMW	E60,	04 31 03
83 30 0 493 649	323 150	Rear toe adjuster	BMW	E53,	04 51 00
83 30 0 493 646	334 159	mount installer	BMW	E53,	04 50 99
83 30 0 493 647	512 170	engine hood extension	BMW	E53,	04 50 99
83 30 0 493 681	641 020	grill remover	BMW	E53,	04 50 99
83 30 0 493 183	651 150	HiFI test cable	BMW	E46,	
83 30 0 493 831	313 367	Protective insert	BMW	E52,	04 11 00
83 30 0 492 406	334 149	Support feet	BMW	E39,	04 20 00
83 30 0 492 414	334 157	Pressure plate	BMW	E39,	04 20 00
83 30 0 492 413	334 156	Spindle	BMW	E39,	04 20 00
83 30 0 493 822	543 000	Pin wrench	BMW	E46,	04 25 00
83 30 0 493 253	241 070	Seal Installer	BMW	E46,	
83 30 0 493 254	241 080	Seal puller	BMW	E46,	
83 30 0 493 287	245 304	Transmission support plate	BMW	E46,	
83 30 0 493 824	334 261	Wheel bearing remover	BMW	E53,	04 52 00
83 30 0 493 807	221 018	Rubber bushing remover	BMW	E53,	04 52 00
83 30 0 493 808	221 019	Rubber bushing remover	BMW	E53,	04 52 00
83 30 0 493 732	341 290	Ring spanner	BMW	E53,	04 52 00

Order P/N	6 digit P/N	Description	Brand	Series	SIB
83 30 0 493 797	230 130	Transmission fixture	BMW	E53,	04 52 00
83 30 0 493 452	333 227	Bushing sleeve	BMW	E46,	04 02 01
83 30 0 493 451	333 228	Bushing sleeve	BMW	E46,	04 02 01
83 30 0 493 852	612 090	Seat adapter cable	BMW	E52,	04 12 01
83 30 0 495 762	221 100	Mount Remover	BMW	E70,	04 39 06
83 30 0 494 019	541 210	Rivet remover	BMW	E46,	04 18 01
83 30 0 495 763	271 460	Seal Installer	BMW	E70,	04 39 06
83 30 0 493 321	135 250	Slide hammer	BMW	E46,	04 18 01
83 30 0 494 385	324 011	Pressure adapters	BMW	E38,	04 21 01
83 30 0 494 386	324 012	Pressure adapters	BMW	E38,	04 21 01
83 30 0 494 628	312 158	Base adapter	BMW	E46,	04 24 01
83 30 0 495 764	271 470	Seal Installer	BMW	E70,	04 39 06
83 30 0 490 512	009 220	Wiper arm adjustment tool	BMW	E53,	04 51 01
83 30 0 493 927	119 460	Gauge set	BMW	E65,	04 31 01
83 30 0 494 201	242 350	Seal remover	BMW	E65,	04 31 01
83 30 0 494 062	245 306	Transmission support	BMW	E65,	04 31 01
83 30 0 494 187	313 030	Extraction tool	BMW	E65,	04 31 01
83 30 0 495 765	271 480	Seal Installer	BMW	E70,	04 39 06
83 30 0 494 048	334 280	Bushing extraction tool	BMW	E65,	04 31 01
83 30 0 494 158	614 320	Fibre Optic Crimping set	BMW	E65,	04 31 01
83 30 0 493 962	614 380	Break out box	BMW	E65,	04 01 02
83 30 0 493 923	119 410	Seal extractor	BMW	E65,	04 06 02
83 30 0 493 924	119 420	Seal installer	BMW	E65,	04 06 02
83 30 0 493 926	119 450	Brace	BMW	E65,	04 06 02
83 30 0 493 928	119 470	Valvetronic bridge support	BMW	E65,	04 06 02
83 30 0 493 929	119 480	Torsion lever	BMW	E65,	04 06 02
83 30 0 495 829	314 150	Mount Remover	BMW	E70,	04 39 06
83 30 0 493 930	119 490	Protective sleeves	BMW	E65,	04 06 02
83 30 0 494 200	242 360	Seal installer	BMW	E65,	04 06 02
83 30 0 494 199	242 370	Seal installer	BMW	E65,	04 06 02
83 30 0 494 208	245 366	Seal installer	BMW	E65,	04 06 02
83 30 0 494 138	170 030	Oil cooler pliers	BMW	E65,	04 06 02
83 30 2 213 028	313 369	Protective inserts	BMW	E65,	04 06 02
83 30 0 494 183	321 020	Tool set	BMW	E65,	04 06 02
83 30 0 494 058	321 030	Line lever	BMW	E65,	04 06 02
83 30 0 494 179	321 270	Plug set	BMW	E65,	04 06 02
83 30 0 494 182	323 170	Airbag remover	BMW	E65,	04 06 02
83 30 0 494 057	346 320	Lever	BMW	E65,	04 06 02
83 30 0 494 168	512 180	Hood locking bar	BMW	E65,	04 06 02
83 30 0 494 190	641 030	Release hook	BMW	E65,	04 06 02
83 30 0 494 212	242 380	Socket	BMW	E65,	04 09 02
83 30 0 494 213	242 390	Protective cap	BMW	E65,	04 09 02
83 30 0 494 171	334 227	Fixture set	BMW	E65,	04 09 02
83 30 0 495 858	314 160	Seal Installer	BMW	E70,	04 39 06
83 30 0 493 967	334 205	Thrust rod remover	BMW	E53,	04 50 02
83 30 0 495 899	314 170	Locking Tool	BMW	E70,	04 39 06
83 30 0 494 151	161 060	Fuel line plug	BMW	E65,	04 10 02
83 30 0 493 541	002 150	T50 torx socket	BMW	E46,	04 14 00
83 30 0 493 709	114 240	Oil line disconnect tool	BMW	E52,	04 17 00
83 30 0 492 405	334 148	Support feet	BMW	E39,	04 20 00
83 30 0 493 825	334 262	Bearing Installer	BMW	E53,	04 52 00
83 30 0 494 325	512 190	Door Lock Tool	BMW	E65,	04 16 02
83 30 0 494 131	613 160	54 Pin Adapter Cable	BMW	E65,	04 18 02
83 30 0 494 898	543 140	Top support	BMW	E64,	04 18 04
83 30 0 494 009	346 310	Handbrake cable release tool	MINI	R50,	04 01 02
83 30 0 493 999	216 100	Clutch tool	MINI	R50,	04 01 02
83 30 0 494 015	632 100	Headlamp adjusting tool	MINI	R50,	04 01 02
83 30 0 494 002	324 200	Rear toe adjuster	MINI	R50,	04 01 02
83 30 0 494 016	118 370	Engine support bracket	MINI	R50,	04 01 02
83 30 0 493 994	118 310	Damper puller	MINI	R50,	04 01 02
83 30 0 494 045	118 400	Front end extension	MINI	R50,	04 01 02
83 30 0 494 173	324 110	Vehicle height measurement tool	MINI	R50,	04 01 02
83 30 0 493 996	118 340	Adaptor plate	MINI	R50,	04 01 02
83 30 0 493 964	649 100	2 pin test cable	MINI	R50,	04 02 02
83 30 0 493 921	127 360	4 pin test cable	MINI	R50,	04 02 02
83 30 0 493 963	631 020	9 pin test cable	MINI	R50,	04 02 02
83 30 0 493 918	127 240	40 pin test cable	MINI	R50,	04 02 02
83 30 0 493 919	127 250	81 pin test cable	MINI	R50,	04 02 02
83 30 0 494 266	315 140	Control arm press	MINI	R50,	04 03 02
83 30 0 494 265	315 150	Control arm bushing tool	MINI	R50,	04 03 02
83 30 0 494 252	118 410	Tension lever	MINI	R53,	04 04 02
83 30 0 495 904	000 490	Bracket T tool	MINI	R56,	04 05 07

Order P/N	6 digit P/N	Description	Brand	Series	SIB
83 30 0 495 826	541 120	Centering Pins	MINI	R56,	04 05 07
83 30 0 495 916	119 530	Engine Support Plate	MINI	R56,	04 05 07
83 30 0 495 958	119 670	Slip Bush Tool	MINI	R56,	04 05 07
83 30 0 495 794	172 050	Hose Plier Set	MINI	R56,	04 05 07
83 30 0 495 779	613 360	V-Cable 53- pin	MINI	R56,	04 04 07
83 30 0 495 682	335 100	Spring Tensioner	BMW	E70,	04 39 06
83 30 0 495 780	613 370	V-Cable 5 pin	MINI	R56,	04 04 07
83 30 0 495 781	613 380	V-Cable 4 pin	MINI	R56,	04 04 07
83 30 0 495 782	613 390	V-Cable 5 pin	MINI	R56,	04 04 07
83 30 0 495 783	613 400	V-Cable 3 pin	MINI	R56,	04 04 07
83 30 0 495 784	613 410	V-Cable 4 pin	MINI	R56,	04 04 07
83 30 0 495 785	613 420	V-Cable 6 pin	MINI	R56,	04 04 07
83 30 0 495 786	613 430	V-Cable 2 pin	MINI	R56,	04 04 07
83 30 0 495 247	244 270	Adjustment gauge	MINI	R53,	04 02 06
83 30 0 494 840	641 490	AC Sprayer Wand	BMW	E85,	04 27 04
83 30 0 495 851	335 120	Shaft Remover	BMW	E70,	04 39 06
83 30 0 495 860	335 130	Seal Installer	BMW	E70,	04 39 06
83 30 0 495 863	335 150	Mount Remover	BMW	E70,	04 39 06
83 30 0 495 864	335 160	Mount Remover	BMW	E70,	04 39 06
83 30 0 495 865	335 170	Mount Remover	BMW	E70,	04 39 06
83 30 0 495 885	002 260	Hoist Fixture	BMW	E70,	04 39 06
83 30 0 495 830	512 240	Hood Support	BMW	E70,	04 39 06
83 30 0 495 771	610 110	Heater Test Cable	BMW	E70,	04 40 06
83 30 0 495 772	610 120	DME Test Cable	BMW	E70,	04 40 06
83 30 0 495 773	610 130	Electric Coolant Pump Test Cable	BMW	E70,	04 40 06
83 30 0 495 774	610 140	Air Mass Meter Test Cable	BMW	E70,	04 40 06
83 30 0 495 775	610 150	Tailgate Test Cable	BMW	E70,	04 40 06
83 30 0 495 776	610 160	Tailgate Test Cable	BMW	E70,	04 40 06
83 30 0 495 777	610 170	Steering Lock Test Cable	BMW	E70,	04 40 06
83 30 0 494 137	246 080	16 Pin Adapter cable	BMW	E65,	04 30 01
83 30 0 495 814	721 200	Rivet Extractor	BMW	E92,	04 01 07
83 30 0 495 534	641 300	AC Sprayer Wand	BMW	E70,	
83 30 0 496 049	540 000	Set 1.1 Roof Module Adjustment gauges	BMW	E93,	04 12 07
83 30 0 496 091	540 040	et 1.2 Mechanical Tools for RHT	BMW	E93,	04 12 07
83 30 0 496 090	540 020	Set 2.1 Lifting Frame set for RHT	BMW	E93,	04 12 07
83 30 0 496 092	540 030	Set 2.2 Gauge set for RHT	BMW	E93,	04 12 07
83 30 0 496 029	540 120	Basic Gauge (1-3)	BMW	E93,	04 12 07
83 30 0 496 033	540 130	Coupling Gauge (1-2)	BMW	E93,	04 12 07
83 30 0 496 042	540 180	Barrel screw socket	BMW	E93,	04 12 07
83 30 0 496 055	009 450	Torque Wrench	BMW	E93,	04 12 07
83 30 0 496 043	540 190	Lock Nut Socket	BMW	E93,	04 12 07
83 30 0 496 041	540 160	Emergency Tool (1-3)	BMW	E93,	04 12 07
83 30 0 496 072	540 240	Assembly Supports	BMW	E93,	04 12 07
83 30 0 496 058	510 320	Window Assembly Aid (1-2)	BMW	E93,	04 12 07
83 30 0 496 040	540 170	Service Position Fixture	BMW	E93,	04 12 07
83 30 0 496 083	371 160	WAF24 Ring Spanner	BMW	E70,	04 13 07
83 30 0 496 007	004 430	Double Torx Tool	BMW	E93,	04 12 07
83 30 0 496 046	510 020	Rear Window Assembly Aid (1-2)	BMW	E93,	04 12 07
83 30 0 494 745	613 120	Switch adjustment tool	BMW	E60,	04 19 05
83 30 0 494 721	334 310	Bushing fixture	BMW	E60,	04 19 05
83 30 0 495 220	616 210	Wiper arm remover	BMW	E90,	04 20 05
83 30 0 495 253	614 360	Seat Test Cable	BMW	E90,	04 25 05
83 30 0 495 332	611 370	Wiper Alignment Gauge	BMW	E91,	04 05 06
83 30 0 491 816	261 080	Mandrel	BMW	E31,	
83 30 0 495 850	000 452	Engine Support Feet	BMW	E70,	04 13 07
83 30 0 495 852	314 100	Support Adapters	BMW	E70,	
83 30 0 496 386	510 340	Door Lock Striker Adapter	BMW	E88,	04 25 08
83 30 0 496 328	510 330	Assembly aid for side (door)	BMW	E88,	04 19 08
83 30 0 496 537	520 000	Seat Occupancy Detection Cable (OC3)	BMW	E83,	04 43 08
83 30 0 494 251	513 240	Window Adjutment Wrench	BMW	E88,	
83 30 0 496 047	540 230	Crimping Die	BMW	E93,	04 12 07
83 30 0 495 589	510 310	Clamp Lever	BMW	E93,	04 12 07
83 30 0 496 076	009 470	Gap Gauges	BMW	E93,	04 12 07
83 30 0 496 048	540 200	Bridging connector	BMW	E93,	04 12 07
83 30 0 496 044	540 220	Cover for Separator Module	BMW	E93,	04 12 07
83 30 0 496 028	540 110	Cowl Panel Gauge	BMW	E93,	04 12 07
83 30 0 496 036	540 140	Roof Module Console Gauge	BMW	E93,	04 12 07
83 30 0 496 039	540 150	Rear Module Console Gauge	BMW	E93,	04 12 07
83 30 0 496 062	332 200	Puller	BMW	E30,	
83 30 0 495 799	312 310	Thrust rod remover	BMW	E83,	
83 30 0 496 084	111 240	Assembly Set	BMW	E70,	04 13 07
83 30 0 496 006	312 247	Ball Joint Remover	BMW	E70,	04 13 07

Order P/N	6 digit P/N	Description	Brand	Series	SIB
83 30 0 496 064	332 202	Special Spanner	BMW	E70,	04 13 07
83 30 0 496 577	513 340	Release Tool	BMW	E89,	04 23 09
83 30 0 496 597	540 320	Locking Tool	BMW	E89,	04 23 09
83 30 0 496 598	540 330	Release Tool	BMW	E89,	04 23 09
83 30 0 496 614	510 360	Window Adjustment Tool	BMW	E89,	04 23 09
83 30 0 496 710	510 000	Window Adjustment Gauge	BMW	F07,	04 38 09
83 30 0 496 693	510 370	Adjuster	BMW	F07,	04 38 09
83 30 0 496 726	510 400	Window Adjustment Wrenches	BMW	F07,	04 38 09
83 30 0 496 606	330 160	Bushing Tools	BMW	E89,	04 14 10
83 30 0 496 590	540 300	Soft Top Adapter	BMW	E89,	04 14 10
83 30 0 496 616	540 350	Clamping Hooks	BMW	E89,	04 14 10
83 30 0 000 000	540 100	Soft Top Adapter	BMW	E89,	
83 30 0 495 257	645 105	Evaporative test adapter	BMW	E53,	
83 30 0 495 258	645 106	Evaporator test adapter	BMW	E53,	
83 30 0 496 729	240 300	Transmission Support	BMW	E72,	04 28 10
83 30 0 496 728	240 320	Guide Pins	BMW	E72,	04 28 10
83 30 0 496 827	540 080	Adapter Set	BMW	E72,	04 28 10
83 30 0 496 810	540 050	Lifting Frame	BMW	E72,	04 28 10
83 30 0 496 858	120 000	Assembly Aid	BMW	F04,	04 29 10
83 30 0 496 859	120 010	Retaining Screws	BMW	F04,	04 29 10
83 30 0 496 470	241 380	Torque Converter Lock	BMW	E71,	04 04 09
83 30 0 496 323	543 240	Lifting Device	BMW	E88,	04 17 09
83 30 0 496 324	543 250	Adapter with Chain and Hook	BMW	E88,	04 17 09
83 30 0 496 451	543 260	Adapter with Brace	BMW	E88,	04 17 09
83 30 0 496 454	543 270	Fixture for Brace	BMW	E88,	04 17 09
83 30 0 496 458	543 300	Beam	BMW	E88,	04 17 09
83 30 0 496 459	543 310	Hydraulic Support	BMW	E88,	04 17 09
83 30 0 496 460	543 320	Adapter for Top Support, left and right	BMW	E88,	04 17 09
83 30 0 496 461	543 330	Top Support, left and right	BMW	E88,	04 17 09
83 30 0 496 601	614 170	V-Adapter test Cable	BMW	E89,	04 29 09
83 30 0 496 682	614 250	Connector with Bridge	BMW	E89,	04 29 09
83 30 0 496 702	510 210	Window Assembly Aid	BMW	E93,	04 32 09
83 30 0 496 462	511 200	Release Hook	BMW	E71,	
83 30 0 496 008	314 180	Clamping Piece	BMW	E70,	
83 30 0 491 920	312 152	Pressure Pad	BMW	E46,	04 24 01
83 30 0 491 921	312 153	Brace	BMW	E46,	04 24 01
83 30 0 493 682	271 100	Support Arms	BMW	E53,	04 50 00
83 30 0 494 130	119 264	Screw for M12 thread	BMW	E65,	04 10 02
83 30 0 494 129	119 263	Sleeve for Counter Holder	BMW	E65,	04 10 02
99 00 0 006 667		Anti-Static Mat for Electro Static Discharge	BMW	E60,	04 19 04
83 30 0 496 647	720 060	License plate template	BMW	F10,	
83 30 0 496 674	320 000	Ride Height Measurement Fixture	BMW	E89,	
83 30 2 210 961		Lifting Gear Shackle	BMW	F12,	04 15 12
83 30 0 496 724	610 260	Battery Devcie	BMW	F04,	04 29 10
83 30 0 496 960		28 Pin EME Test Cable	BMW	F04,	04 23 11
83 30 2 213 409		Cover Release Tool	BMW	F12,	04 26 11
83 30 2 221 148		Battery Support Tool	BMW	F04,	
83 30 0 492 594	512 040	Spanner Wrench	BMW	E93,	
83 30 0 496 860	240 330	Seal Tool	BMW	E72,	04 05 11
83 30 2 208 426	240 340	Seal Tool	BMW	E72,	04 05 11
83 30 2 208 427	240 350	Seal Tool	BMW	E72,	04 05 11
81 43 2 158 707		Roof Clamps	BMW	F01,	
83 30 0 493 335	241 090	Seal Installer	BMW	E46,	
83 30 2 365 070		Support Feet	BMW	F45,	
83 30 2 230 163		Bearing Race Adapter	BMW	F25,	04 19 12
83 30 2 318 114		Seal Installer	BMW	F25,	04 20 12
83 30 2 294 573		Roof Lock Lever	BMW	E89,	04 22 12
83 30 2 293 768		Rubber Bushing Remover	BMW	F25,	04 23 12
83 30 2 293 770		Rubber Bushing Installer	BMW	F25,	04 23 12
83 30 2 293 777		Rubber Bushing Sleeve	BMW	F25,	04 23 12
83 30 2 293 772		Rubber Bushing Installer	BMW	F25,	04 23 12
83 30 2 293 775		Ball Joint Remover	BMW	F25,	04 23 12
83 30 2 293 776		Ball Joint Installer	BMW	F25,	04 23 12
83 30 2 293 791		Rubber Mount Remover	BMW	F25,	04 23 12
83 30 2 293 785		Guide	BMW	F25,	04 23 12
83 30 2 293 788		Rubber Mount Installer	BMW	F25,	04 23 12
83 30 2 293 790		Rubber Mount Plate	BMW	F25,	04 23 12
83 30 2 293 876		Front Support Feet	BMW	E89,	04 24 12
83 30 2 293 877		Rear Support Feet	BMW	E89,	04 24 12
83 30 2 411 678		Alignment Pins	BMW	G12,	
83 30 2 213 042		Spring Clamping Set	BMW	F30,	04 08 13
83 30 2 240 523		Top Centering Ring Insert	BMW	F30,	04 08 13

Order P/N	6 digit P/N	Description	Brand	Series	SIB
83 30 2 240 516		Tension Plate	BMW	F30,	04 08 13
83 30 2 222 500		Cowel Panel Gauge	BMW	E93,	
83 30 2 222 501		Cowel Update Kt	BMW	E93,	
83 30 0 495 826		Centering Pins	BMW	F10,	
83 30 2 360 046		Coupling Gauge	BMW	F33,	
83 30 2 360 048		Rear Module Bearing Gauge	BMW	F33,	
83 30 2 411 031		Latch Hook Conversion Piece	BMW	G12,	
83 30 2 411 131		Seal Installer	BMW	G12,	04 23 15
83 30 2 352 992		54 Pin test Cable	BMW	G12,	04 26 15
83 30 2 352 993		64 Pin test Cable	BMW	G12,	04 26 15
83 30 2 408 789		Electronic Waste Gate Test Cable	BMW	G12,	04 26 15
83 30 2 361 523		NanoMQS Test Leads	BMW	G12,	04 26 15
83 30 2 411 349		Flow Drill Screw Sockets	BMW	G12,	04 26 15
83 30 2 410 685		Installation Tool	BMW	G12,	04 26 15
83 30 2 410 339		Vacuum Adapter	BMW	G12,	04 26 15
83 30 2 410 217		Removal Tool	BMW	G12,	04 23 15
83 30 2 410 274		Vacuum Adapter	BMW	G12,	04 23 15
83 30 2 410 998		Adapter	BMW	G12,	
83 30 2 409 998		Cable Holder Release Tools	BMW	F15,	04 27 15
83 30 2 359 049		Thread Repair insert M6	BMW	F15,	04 27 15
83 30 2 410 670		Depressing Device	BMW	G12,	04 34 15
83 30 2 412 134		NanoMQS Pin Removal Tool - Small	BMW	G12,	04 34 15
83 30 2 412 135		NanoMQS Pin Removal Tool - Large	BMW	G12,	04 34 15
83 30 2 410 777		Injector Adapter Plate	BMW	G12,	04 34 15
83 30 2 412 612		Mirror Removal Tool	BMW	G12,	04 34 15
83 30 2 409 403		HV Battery Cell Module Charge Cable	BMW	F15,	04 35 15
83 30 2 410 238		Oil Pressure Test Adapter Lid	BMW	G12,	
83 30 2 412 353		Pressure Testing Fixture	BMW	G12,	
83 30 2 240 471		Pull out sleeve	BMW	F30,	
83 30 2 240 472		Disc	BMW	F30,	
83 30 2 240 465		Shaped Element	BMW	F30,	
83 30 2 241 760		Shaped Element	BMW	F30,	
83 30 2 241 780		Disc	BMW	F30,	
83 30 0 496 887		Shaped Element	BMW	F30,	
83 30 2 240 515		Torx E10 Socket	BMW	F30,	
83 30 2 240 469		Pull out disc	BMW	F30,	
83 30 2 240 476		Pull in disc	BMW	F30,	
83 30 2 240 473		Pull out sleeve	BMW	F30,	
83 30 2 413 036		N63R Oil Pump Adjustment Gauge	BMW	G12,	04 38 15
83 30 2 365 718	118 570	Mounting Feet Frame	BMW	F33,	
83 30 2 359 293		Spring Protector Inserts	BMW	F15,	
83 30 2 409 646		Release Tool	BMW	G12,	04 41 15
83 30 2 360 047		Roof Shell alignment tool	BMW	F33,	
83 30 2 406 075		Retraction Tool	BMW	F23,	
83 30 2 410 135		Pump Gauge	BMW	F48,	04 37 15
83 30 2 365 488		TDC Adapter	BMW	F48,	04 37 15
83 30 0 496 862		Pressing Adapter	BMW	F48,	04 37 15
83 30 2 406 773		Support Pin	BMW	F48,	04 37 15
83 30 2 406 774		Adapter	BMW	F48,	04 37 15
83 30 2 352 990	331 300	132 Pin Break Out Box (B.O.B.)	BMW	G12,	
83 30 2 420 291		2-Pin ACSM Test Adapter	BMW	G12,	04 20 16
83 30 2 420 292		2-Pin ACSM Test Adapter	BMW	G12,	04 20 16
83 30 2 420 293		6-Pin ACSM Test Adapter	BMW	G12,	04 20 16
83 30 2 405 562		5-star safety bit	BMW	F48,	
83 30 0 491 003	114 030	Connection nipple	BMW	E34,	
83 30 0 491 070	116 070	Universal socket	BMW	E34,	
83 30 0 491 115	121 080	Ignition wire repair kit	BMW	E36,	
83 30 0 491 370	161 030	Pin wrench	BMW	E31,	
83 30 0 492 264	333 210	Press	BMW	E31,	
83 30 0 493 981	118 230	Crankshaft seal installer rear	MINI	R50,	04 01 02
83 30 0 493 987	118 260	Engine support tool	MINI	R50,	04 01 02
83 30 0 493 995	118 320	Crankshaft locking tool	MINI	R50,	04 01 02
83 30 0 493 998	118 360	Oil pressure adapter	MINI	R50,	04 01 02
83 30 0 494 003	346 300	Brake caliper tool	MINI	R50,	04 01 02
83 30 0 494 014	612 100	Wiper arm remover	MINI	R50,	04 01 02
83 30 0 493 997	118 350	Engine lift brackets	MINI	R50,	04 01 02
83 30 0 494 256	118 450	Damper puller	MINI	R53,	04 04 02
83 30 0 494 257	118 460	Brace	MINI	R53,	04 04 02
83 30 0 494 269	118 470	Locking pin	MINI	R53,	04 04 02
83 30 0 494 277	118 490	Compression adapter	MINI	R53,	04 04 02
83 30 0 491 391	170 009	Radiator adapter	MINI	R53,	04 04 02
83 30 0 494 271	170 050	Radiator adapter set	MINI	R53,	04 04 02

Order P/N	6 digit P/N	Description	Brand	Series	SIB
83 30 0 494 261	212 210	Centering mandrel	MINI	R53,	04 04 02
83 30 0 494 274	234 000	Drift set	MINI	R53,	04 04 02
83 30 0 494 345	234 010	Shift cable remover	MINI	R53,	04 04 02
83 30 0 494 253	248 110	Drift	MINI	R53,	04 04 02
83 30 0 494 255	248 120	Seal protectors	MINI	R53,	04 04 02
83 30 0 493 685	230 250	Output flange nut wrench	BMW	E53,	04 52 00
83 30 0 493 978	118 380	Engine Mount Remover	MINI	R50,	04 01 02
83 30 0 493 979	118 390	Alternator belt tool	MINI	R50,	04 01 02
83 30 0 493 989	118 280	Locking Pin	MINI	R50,	04 01 02
83 30 0 493 990	118 290	Seal Remover	MINI	R50,	04 01 02
83 30 0 493 988	118 270	Crankshaft adaptor	MINI	R50,	04 01 02
83 30 0 493 993	118 300	Crankshaft Gear Remover	MINI	R50,	04 01 02
83 30 0 493 982	118 240	Crankshaft pulley installer	MINI	R50,	04 01 02
83 30 0 493 980	118 220	Seal Protector	MINI	R50,	04 01 02
83 30 0 494 917	543 180	Convertible top support	MINI	R52,	04 03 04
83 30 0 494 270	118 480	Intercooler cover	MINI	R53,	04 02 03
83 30 0 494 466	131 130	Pressure Hose Adapter	MINI	R53,	04 02 03
83 30 0 495 333	543 190	Convertible adjustment Gauge	MINI	R52,	54 06 05
83 30 0 495 244	244 240	T55 Torx Wrench	MINI	R53,	04 04 06
83 30 0 495 245	244 250	Seal Installer	MINI	E53,	04 04 06
83 30 0 495 246	244 260	Converter Handles	MINI	E53,	04 04 06
83 30 0 495 248	244 280	Seal Extractor	MINI	E53,	04 04 06
83 30 0 495 249	244 290	Seal Installer	MINI	E53,	04 04 06
83 30 0 495 250	244 300	Seal Installer	MINI	E53,	04 04 06
83 30 0 496 016	119 630	Support bracket	MINI	R56,	04 16 07
83 30 0 495 884	230 380	Drift	MINI	R56,	04 02 07
83 30 0 495 968	613 440	V-adaptor cable, 10-pin	MINI	R56,	04 10 07
83 30 0 495 969	613 450	V-adaptor cable, 14-pin	MINI	R56,	04 10 07
83 30 0 495 970	613 460	V-adaptor cable, 19-pin	MINI	R56,	04 10 07
83 30 0 495 971	613 470	V-adaptor cable, 4-pin	MINI	R56,	04 10 07
83 30 0 495 972	613 480	V-adaptor cable, 2-pin	MINI	R56,	04 10 07
83 30 0 495 828	323 210	Box Spanner	MINI	R56,	04 02 07
83 30 0 495 815	641 140	Threaded Rod	MINI	R56,	04 02 07
83 30 0 493 986	118 250	Camshaft locking tool	MINI	R50,	04 01 02
83 30 0 494 251	513 240	Key wrench	MINI	R53,	04 04 02
83 30 0 495 928	119 570	Compression ring tool	MINI	R56,	04 13 07
83 30 0 495 948	119 620	Assembly tool	MINI	R56,	04 13 07
83 30 0 495 952	119 650	Pressing tool	MINI	R56,	04 13 07
83 30 0 495 955	119 660	Pressing tool	MINI	R56,	04 13 07
83 30 0 495 798	314 090	Support adaptor	MINI	R56,	04 13 07
82 14 0 429 692		Fuel Injector cleaner	MINI	R56,	04 07 07
82 14 0 428 376		Fuel Injection cleaning solution	MINI	R56,	04 07 07
83 30 0 495 888	002 270	Fixture tool	MINI	R56,	04 02 07
83 30 0 495 870	212 290	Clutch tool	MINI	R56,	04 02 07
83 30 0 495 799	312 310	Press tool	MINI	R56,	04 02 07
83 39 9 495 828	346 309	Pin Spanner	MINI	R56,	04 02 07
83 30 0 495 805	616 130	Extracting Tool	MINI	R56,	04 02 07
83 30 0 495 778	613 350	V-Cable 32 pin	MINI	R56,	04 04 07
83 30 0 495 596	346 309	Pin Spanner	MINI	R56,	04 02 07
83 30 0 496 684	614 220	I-Adapter Cable 2 Pin	MINI	R57,	04 06 09
83 30 0 496 683	614 230	I-Adapter Cable 2 Pin	MINI	R57,	04 06 09
83 30 0 496 305	118 731	Compression Adapter	MINI	R56,	04 01 08
83 30 0 496 323	543 240	Lifting Harness for Convertible Top	MINI	R57,	04 14 09
83 30 0 495 554	335 070	Extension piece	MINI	R60,	04 02 11
83 30 2 210 964	230 420	Puller	MINI	R60,	04 06 11
83 30 0 494 502	311 040	Mandrel	MINI	R60,	
83 30 0 494 880	612 380	12 Pin adapter cable	MINI	R56,	
83 30 0 494 910	612 430	14 Pin adapter cable	MINI	R56,	
83 30 0 494 876	612 340	51 Pin adapter cable	MINI	R56,	
83 30 0 493 854	630 410	LCM Test Cable	MINI	R56,	
83 30 2 294 516		Pin Wrench for Rear Caliper	MINI	R60,	04 03 12
83 30 0 496 959	330 080	Driveshaft Wrench	MINI	R60,	04 02 11
83 30 0 496 700	543 280	Adapter for lifting convertable top	MINI	R57,	04 01 10
83 30 2 208 622	230 340	Mandrel	MINI	R60,	04 06 11
83 30 2 210 963	240 210	Mandrel	MINI	R60,	04 06 11
83 30 2 210 962	240 220	Puller	MINI	R60,	04 06 11
83 30 0 496 954	240 230	Mandrel	MINI	R60,	04 06 11
83 30 2 210 960	240 240	Puller	MINI	R60,	04 06 11
83 30 0 496 953	330 090	Mandrel	MINI	R60,	04 06 11
83 30 0 496 951	330 180	Support Mount Tool	MINI	R60,	04 06 11
83 30 0 496 957	330 190	Cross-member Mount Tool	MINI	R60,	04 06 11
83 30 2 352 718		33-Pin test cable for automatic transmission	MINI	F56,	04 03 14

Order P/N	6 digit P/N	Description	Brand	Series	SIB
83 30 2 252 734		15-Pin test cable for automatic transmission	MINI	F56,	04 04 14
83 30 0 496 132		Rear Crankshaft Seal Installer	MINI	F56,	04 07 14
83 30 2 357 904		Alignment Gauge	MINI	F56,	04 08 14
83 30 2 289 603		Oil Filter Housing Adapter	MINI	F56,	04 08 14
83 30 2 358 646		Positioning Gauge	MINI	F56,	04 08 14
83 30 2 358 122		Camshaft Gauge	MINI	F56,	04 08 14
83 30 2 360 215		Seal Adapter	MINI	F56,	04 08 14
83 30 2 358 042		Engine Bracket	MINI	F56,	04 08 14
83 30 2 359 338		Bushing Tool	MINI	F56,	04 09 14
83 30 2 360 906		Adapter Cable	MINI	R56,	04 08 11
83 30 2 288 159		Holding Tool	MINI	F56,	04 10 14
83 30 2 360 895		Pin wrench	MINI	F56,	04 10 14
83 30 2 360 051		Window Adjustment Tools	MINI	F56,	04 05 15
83 30 2 357 900		Front Radial Shaft Seal Installer	MINI	F56,	04 06 14
83 30 2 288 380		Camshaft Locking Pin	MINI	F56,	04 06 14
83 30 2 358 464		Radial Shaft Seal Installer	MINI	F56,	04 06 14
83 30 2 358 818		Radial Shaft Seal Installer	MINI	F56,	04 06 14
83 30 2 288 165		Clutch Pressure Piece Adjustment Tool	MINI	F56,	04 06 14
83 30 2 288 166		SAC Reset Ring	MINI	F56,	04 06 14
83 30 2 352 734		15 Pin Test Cable	MINI	F56,	04 04 14
83 30 2 358 465		Radial Shaft Seal Installer	MINI	F56,	04 06 14
83 30 2 358 471		Clutch Disk Alignment Tool	MINI	F56,	04 06 14
83 30 0 494 131	613 160	54 pin test adapter	MINI	E65,	
83 30 0 492 083	331 150	Puller	BMW	ALL,	
83 30 0 492 096	331 300	Puller	BMW	ALL,	
83 30 0 491 074	117 020	oxygen sensor socket	BMW	ALL,	
83 30 0 491 369	161 020	Fuel sender spanner	BMW	ALL,	
83 30 0 491 091	117 450	Oxygen sensor tester	BMW	ALL,	
83 30 0 491 651	240 170	transmission support	BMW	ALL,	
83 30 2 213 022	313 340	spring compressor tool	BMW	ALL,	04 07 00
83 30 0 491 440	230 020	Holder	BMW	ALL,	
83 30 0 491 497	231 200	Guide bushing	BMW	ALL,	
83 30 0 491 498	231 210	Socket 30/83	BMW	ALL,	
83 30 0 491 507	231 300	Installation tool	BMW	ALL,	
83 30 0 491 618	240 020	Adapter set	BMW	ALL,	
83 30 0 491 715	244 000	Fitting handle	BMW	ALL,	
83 30 0 491 810	261 020	transmission gauge	BMW	ALL,	
83 30 0 491 811	261 030	Gauge	BMW	ALL,	
83 30 0 491 812	261 040	Wrench	BMW	ALL,	
83 30 0 493 351	313 120	Spring compressor	BMW	ALL,	
83 30 0 491 967	313 210	Strut Socket	BMW	ALL,	
83 30 0 492 013	322 000	Puller	BMW	ALL,	
83 30 0 492 055	323 110	Ignition switch remover	BMW	ALL,	
83 30 0 492 057	324 000	Gauge	BMW	ALL,	
81 12 9 425 091		55 pin break out box	BMW	ALL,	
81 12 9 425 092		35 pin test cable	BMW	ALL,	
84 11 1 468 739		Transfer kit	BMW	ALL,	
13 64 1 467 905		Injector leak test kit	BMW	ALL,	
83 30 0 490 169	002 490	Adapter	BMW	ALL,	
83 30 0 490 473	005 030	Seat belt pliers	BMW	ALL,	
83 30 0 490 475	005 500	Handle	BMW	ALL,	
83 30 0 490 482	007 500	Puller set	BMW	ALL,	
83 30 0 490 483	007 501	Puller spindle	BMW	ALL,	
83 30 0 490 805	008 510	Puller	BMW	ALL,	
83 30 0 490 724	111 200	Mandrel	BMW	ALL,	
83 30 0 490 728	111 250	Pliers	BMW	ALL,	
83 30 0 491 418	212 080	Clutch depth gauge	BMW	ALL,	
83 30 0 492 515	361 010	Wheel weight tool	BMW	ALL,	
83 30 0 492 806	612 300	Battery draw test cable	BMW	ALL,	
83 30 0 492 832	614 415	Diagnostic lead red	BMW	ALL,	
83 30 0 492 730	611 160	6 pin plug remover	BMW	ALL,	
83 30 0 492 062	324 005	Pressure adapter	BMW	ALL,	
83 30 0 492 063	324 006	Pressure adapter	BMW	ALL,	
83 30 0 492 450	341 000	Puller	BMW	ALL,	
83 30 0 492 465	341 060	Socket	BMW	ALL,	
83 30 0 495 451	341 280	Vernier Caliper	BMW	ALL,	
83 30 0 492 481	343 160	Reducer	BMW	ALL,	
83 30 0 492 485	343 200	Holder	BMW	ALL,	
83 30 0 492 488	344 000	Allen wrench	BMW	ALL,	
83 30 0 492 512	361 000	Runout gauge	BMW	ALL,	
83 30 0 492 735	611 250	Relay pliers	BMW	ALL,	
83 30 0 494 073	611 458	Fused test cable	BMW	ALL,	

Order P/N	6 digit P/N	Description	Brand	Series	SIB
83 30 0 492 801	612 060	20/15 pin adapter	BMW	ALL,	
83 30 0 492 823	613 050	Relay test cable	BMW	ALL,	
83 30 0 492 831	614 414	Diagnostic lead black	BMW	ALL,	
83 30 0 492 848	614 470	18 pin adapter cable	BMW	ALL,	
83 30 0 492 849	614 480	12 pin test cable	BMW	ALL,	
83 30 0 493 094	652 100	Antenna pliers	BMW	ALL,	
61 13 1 467 775	900 322	Connector test kit	BMW	ALL,	
01 00 1 467 882		Static protection Matt	BMW	ALL,	
83 30 0 490 504	009 120	Torque angle tool	BMW	ALL,	
83 30 0 490 513	009 230	Wiper adjustment gauge	BMW	ALL,	
83 30 0 491 131	121 180	Plug pliers	BMW	ALL,	
83 30 0 493 221	212 160	SAC Clamping fixture	BMW	ALL,	
83 30 0 493 832	611 148	Pin Removal Tool	BMW	ALL,	04 11 99
83 30 0 493 564	611 149	Pin Removal Tool blade replacement	BMW	ALL,	04 11 99
81 23 9 415 743		Torx set	BMW	ALL,	
83 30 0 492 834	614 419	88 pin lock lever	BMW	ALL,	
83 30 0 492 214	333 080	Accumulator wrench	BMW	ALL,	
83 30 0 491 399	170 017	Leather pump	BMW	ALL,	
83 30 0 491 396	170 014	Rubber valve	BMW	ALL,	
83 30 0 491 395	170 013	Rubber seal	BMW	ALL,	
83 30 0 492 516	361 020	Sidewall depressor	BMW	ALL,	
83 30 0 490 527	009 310	Wedge kit	BMW	ALL,	
83 30 0 491 731	244 130	Clamping tool	BMW	ALL,	
83 30 0 492 592	512 010	Pillar protector	BMW	ALL,	
83 30 0 492 742	611 360	Socket release tool	BMW	ALL,	
83 30 0 493 366	513 130	Windshield mounting blocks	BMW	ALL,	04 01 99
83 30 0 492 609	513 010	Windshield lifting device	BMW	ALL,	04 01 99
83 30 0 493 337	002 080	Hand pump for lifetime oil	BMW	ALL,	
83 30 0 493 149	619 044	Cable crimping jaws	BMW	ALL,	
83 30 0 493 108	170 007	Coolant tank cap test adapter	BMW	ALL,	
83 30 0 493 015	621 110	Service interval reset tool	BMW	ALL,	
83 30 0 492 703	611 110	2.5mm pin remover	BMW	ALL,	
81 33 2 344 979		Sandbags	BMW	ALL,	
81 47 0 026 306		Side panel covers	BMW	ALL,	04 02 02
81 47 0 144 364		Wall Bracket	BMW	ALL,	04 02 02
83 30 0 490 613	110 220	Compression test kit	BMW	ALL,	
83 30 0 490 619	110 226	Compression test hose	BMW	ALL,	
83 30 0 494 417	170 100	Coolant system pressure tester	BMW	ALL,	
83 30 0 494 429	170 130	Coolant tester adapter set	BMW	ALL,	
83 30 0 494 696	610 052	Vehicle Key Memory OBD cable	BMW	ALL,	
83 30 0 495 397	611 151	release tool	BMW	ALL,	
82 11 0 433 369		Windshield tape	BMW	ALL,	04 01 99
83 30 0 493 912	612 310	Closed circuit adapter	BMW	ALL,	04 24 00
83 30 0 494 501	161 170	Evap system tester	BMW	ALL,	04 26 00
83 30 0 493 710	118 190	Vibration damper brace	BMW	ALL,	04 29 00
83 30 0 493 802	118 200	Vibration damper holder	BMW	ALL,	04 29 00
83 30 0 493 803	118 210	Vibration damper puller	BMW	ALL,	04 29 00
83 30 0 493 833	361 040	Wheel weight scraper	BMW	ALL,	04 08 01
83 30 0 493 829	361 030	Wheel run out gauge	BMW	ALL,	04 09 01
83 30 0 493 903	341 091	Brake caliper brush	BMW	ALL,	04 10 01
83 30 0 493 731	513 220	Window suction cup	BMW	ALL,	04 11 01
83 30 0 490 490		Hydraulic press	BMW	ALL,	
83 30 0 493 839	212 170	SAC clamping fixture	BMW	ALL,	04 14 01
83 30 0 494 152	321 260	Crimp clamp pliers	BMW	ALL,	
83 30 0 493 863	334 410	Rear differential support	BMW	ALL,	04 17 01
83 30 0 493 855	611 180	Pin removal tool	BMW	ALL,	04 20 01
83 30 0 494 017	170 008	Radiator cap test hose	BMW	ALL,	04 22 01
83 30 0 493 893	641 450	AC sprayer	BMW	ALL,	
81 45 9 429 217		Sata HRS Spray Guns	BMW	ALL,	
83 30 0 447 905		Exhaust back pressure tool	BMW	ALL,	04 12 00
83 30 0 493 441	616 060	Wiper arm remover	BMW	ALL,	04 16 00
83 30 0 493 416	334 400	Race removal kit	BMW	ALL,	04 18 00
83 30 0 494 754	331 110	Bushing Remover Kit	BMW	ALL,	04 12 04
83 30 0 419 270		Anti-static Mat for Electro Static Discharge (ESD)	BMW	ALL,	04 19 04
83 30 0 492 709	611 134	Pin removal tool	BMW	ALL,	
83 30 0 495 231	361 335	Wheel Lock adapter set	BMW	ALL,	
83 30 0 490 627	110 240	Coupling	BMW	ALL,	
00 00 0 211 030		Wynns HVAC system cleaner	BMW	ALL,	04 30 03
90 88 0 632 200	632 200	Headlight Adjustment Tool Conversion Kit	MINI	ALL,	04 03 05
83 30 0 494 362	119 000	Cylinder head clamping fixture	BMW	ALL,	04 21 03
81 62 0 301 768		Windshield removal kit	BMW	ALL,	04 26 03
81 64 0 142 874		Torque wrench	BMW	ALL,	

Order P/N	6 digit P/N	Description	Brand	Series	SIB
81 64 0 142 875		Torque wrench	BMW	ALL,	
83 30 0 490 474	005 040	Seat belt button press	BMW	ALL,	
82 11 1 466 971		Radio Tool	BMW	ALL,	
83 30 0 495 505	510 300	Roller	BMW	ALL,	04 28 06
83 30 0 495 588	161 080	Hose Guide	BMW	ALL,	04 26 06
83 30 0 495 555	614 328	Universal crimping die	BMW	ALL,	04 32 06
83 30 0 495 498	234 050	Universal transission holder	BMW	ALL,	04 13 08
83 30 0 495 403	610 321	Pin Release tool	BMW	ALL,	04 08 06
81 22 2 219 012	002 030	Transmission Stand	BMW	ALL,	
83 30 0 495 145	663 150	ACC adjustment Wench	BMW	ALL,	04 22 05
81 62 0 410 436		Windshield Scraper Set	BMW	ALL,	04 23 05
83 30 0 495 259	510 010	Windshield test gauge	BMW	ALL,	
83 30 0 495 194	612 470	AFS test cable	BMW	ALL,	04 25 05
83 30 0 495 254	614 370	Engine test cable	BMW	ALL,	04 25 05
83 30 0 494 277	118 490	Compression adapter	BMW	ALL,	
83 30 0 495 320	610 200	Crimping set	BMW	ALL,	04 27 05
83 30 0 495 327	610 210	Die for LSK 8 Contacts	BMW	ALL,	04 27 05
83 30 0 495 328	610 220	Die for SLK 2.8 Contacts	BMW	ALL,	04 27 05
83 30 0 495 484	009 324	Trim Remover	BMW	ALL,	04 04 06
83 30 0 495 382	610 300	Electrical Contact Release Kit	BMW	ALL,	04 08 06
83 30 0 495 578	610 325	JPT conector release tool	BMW	ALL,	04 19 06
83 30 0 495 676	610 326	à QSB Connector Release Tool	BMW	ALL,	04 19 06
83 30 0 495 677	610 327	Insertion Tool	BMW	ALL,	04 19 06
83 30 0 495 678	610 328	Insertion Tool	BMW	ALL,	04 19 06
83 30 0 495 680	610 331	SLK Connector Release Tool	BMW	ALL,	04 19 06
83 30 0 420 667		Alcohol Detection Test Tool	BMW	ALL,	
83 30 0 495 446	240 200	Transmission Support Fixture	BMW	ALL,	04 15 07
83 30 0 495 995	003 070	Floor Mat Awl	BMW	ALL,	04 18 07
83 30 0 494 611	334 420	Support Adapters	BMW	ALL,	
83 30 0 495 567	315 250	Universal Axle Support	BMW	ALL,	04 25 07
83 30 0 494 332	663 121	OPPS fibreoptic cable - long	BMW	ALL,	
83 30 0 494 334	663 123	OPPS fibreoptic cable - short	BMW	ALL,	
83 30 0 490 075	000 200	Cross Member	BMW	ALL,	
83 30 0 496 222	645 120	Testing Adapter Set for A/C System Components	BMW	ALL,	04 24 08
83 30 0 491 005	114 050	Reducer	BMW	ALL,	
83 30 2 148 852		Locking Hook Connectors	BMW	ALL,	
83 30 0 496 552		Spindle with nut	BMW	ALL,	
83 30 0 492 173	332 114	Spindle	BMW	ALL,	
83 30 0 496 553	333 011	Spindle	BMW	ALL,	
82 11 0 419 204		BMW Battery Tester	BMW	ALL,	
83 30 0 496 588	610 250	Power Port Release Tool	BMW	ALL,	04 04 10
82 14 0 429 692		Fuel Injection Cleaner	BMW	ALL,	04 07 07
83 30 0 495 073	001 300	Tool Board	BMW	ALL,	
83 30 0 491 259	133 060	Fuel Pressure Adapter Kit	BMW	ALL,	
81 64 2 184 377		Windshield Lifter	BMW	ALL,	
83 30 0 496 535	334 301	Spindle	BMW	ALL,	
83 30 0 492 314	333 314	Spindle	BMW	ALL,	
83 30 0 492 315	333 315	Nut	BMW	ALL,	
83 30 0 492 668	520 050	Hog Ring Pliers	BMW	ALL,	
83 30 0 496 931	540 250	Magnetic Torx Socket	BMW	ALL,	04 26 10
83 30 0 496 534	334 300	Spindle and Nut	BMW	ALL,	
83 30 0 492 288	333 261	Spindle and nut	BMW	ALL,	
83 30 0 496 306	11 8 732	Sealing ring	BMW	ALL,	04 06 08
83 30 0 496 305	11 8 731	Adapter	BMW	ALL,	04 06 08
83 30 2 293 548		DSC Connector Release Tool	BMW	ALL,	04 08 12
83 30 0 496 531	652 014	Replacement Special Blade (1 piece)	BMW	ALL,	04 09 09
81 69 2 154 711	N/A	Universal Seat Adapter	BMW	ALL,	04 12 09
83 30 0 496 413	006 000	Engine support	BMW	ALL,	
83 30 0 496 420	006 010	Support Feet (set)	BMW	ALL,	
83 30 0 496 421	006 020	Support Feet (set)	BMW	ALL,	
83 30 0 496 422	006 030	Support Feet (set)	BMW	ALL,	
83 30 0 496 426	006 040	Support Feet (set)	BMW	ALL,	
83 30 0 492 620	513 050	Windshield strip installation tool	BMW	ALL,	
81 39 2 152 473		Vacuum charger for engine cooling system	BMW	ALL,	04 34 08
83 30 0 495 305	663 142	OPS OBD D-CAN cable	BMW	ALL,	
83 30 0 496 464	610 240	Plier Jaws LSK 8	BMW	ALL,	04 28 09
83 30 0 496 778	009 460	Torque wrench	BMW	ALL,	04 03 10
83 30 0 495 743	118 560	Piston Pin Retainer tools	BMW	ALL,	
81 64 2 162 483		Heavy duty puller - rotors	BMW	ALL,	04 27 09
83 30 0 496 714	009 030	Oring Removal Tool	BMW	ALL,	04 33 09
83 30 0 492 325	333 333	Spindle with nut	BMW	ALL,	
83 30 2 250 167	313 350	Spring Retainer Kit -	BMW	ALL,	04 04 98

Order P/N	6 digit P/N	Description	Brand	Series	SIB
83 19 9 410 979	511 728	Winshield Tape	BMW	ALL,	04 01 99
99 00 0 001 855		Exhaust System Back Pressure Test Tool	BMW	ALL,	04 12 00
83 30 2 150 913		Nitrogen Test Gauges	BMW	ALL,	04 40 08
83 30 2 152 290		Adapter	BMW	ALL,	04 40 08
81 31 0 442 898		ACC Adjustment System	BMW	ALL,	
81 43 2 155 739		Hand-held riveting tool	BMW	ALL,	04 25 09
83 30 2 296 188		Magnetic Test Card	BMW	ALL,	04 31 11
83 30 0 492 455	341 050	Brake tool	BMW	ALL,	
81 64 2 298 613		Electronic Torque/Angle wrench	BMW	ALL,	
81 64 2 298 612		Electronic Torque/Angle wrench	BMW	ALL,	
83 30 0 491 075	117 030	O2 sensor wrench	BMW	ALL,	
83 30 2 299 561		Test Cable set	BMW	ALL,	
83 30 0 495 794	172 050	Pliers	BMW	ALL,	
83 30 0 490 561	110 000	Engine support	BMW	ALL,	
83 30 0 490 796	111 480	Seal Pliers	BMW	ALL,	
83 30 2 209 122	006 130	Support Feet Adapter (2)	BMW	ALL,	04 17 11
83 30 2 209 123	006 140	Support Feet Adapter (2)	BMW	ALL,	04 17 11
83 30 2 221 122		Wire Stripper	BMW	ALL,	
81 22 2 184 136		Mobile Lifting Table	BMW	ALL,	04 02 11
83 30 0 492 518	361 300	Wheel Lock Adapter Set - Main	BMW	ALL,	
81 39 0 429 281		Deutronic Trolley	BMW	ALL,	
83 30 0 496 852	006 100	Engine support	BMW	ALL,	04 17 11
81 64 2 184 117		Pliers Set	BMW	ALL,	04 07 11
81 64 2 208 573		Threaded Spindle Set	BMW	ALL,	04 08 11
83 30 0 496 880	614 280	Coaxial Antenna Cable Repair Tool Set	BMW	ALL,	04 06 11
83 30 0 439 685		Fuel Composition Tester	BMW	ALL,	
83 30 2 304 553		Window depth gauge	BMW	ALL,	
83 30 2 354 941		Roof Pins	BMW	ALL,	
83 30 0 492 236	333 144	Spindle	BMW	ALL,	
83 30 0 496 423	006 031	Support	BMW	ALL,	
81 43 2 326 501		Pull Handles - Window	BMW	ALL,	04 18 12
81 64 0 418 185		Electronic Torque/Angle Wrench	BMW	ALL,	04 08 14
83 30 2 495 212		Crimping Pliers	BMW	ALL,	04 21 12
81 29 2 208 034		Carbon Blaster	BMW	ALL,	04 12 11
83 30 0 496 065	121 230	Rubber Spark Plug Holder	BMW	ALL,	
83 30 0 492 473	343 100	Vacuum Gauge	BMW	ALL,	
83 30 0 495 394	610 312	Pin Removal Tool	BMW	ALL,	
83 19 2 163 666		Protective Fender Covers	BMW	ALL,	
83 30 0 492 705	611 130	Connector Release kit	BMW	ALL,	
83 30 0 492 720	611 150	Connector Release Kit	BMW	ALL,	
83 30 2 336 541		Wire punch tool for window seal	BMW	ALL,	
83 30 2 299 380		Test Kit (complete set)	BMW	ALL,	04 05 13
83 30 2 334 053		PDC Hole Punch Set	BMW	ALL,	
83 30 2 298 505		Panel Wedge	BMW	ALL,	
83 30 2 298 504		Panel wedge	BMW	ALL,	
83 30 2 339 719		Interior protection	BMW	ALL,	
83 30 2 359 976		Suction Cups	BMW	ALL,	
83 30 2 364 711		Plug Set	BMW	ALL,	
83 30 2 361 287		Compass	BMW	ALL,	
83 30 0 495 971	613 470	Vadapter cable	BMW	ALL,	
83 30 0 495 345	161 176	Plug	BMW	ALL,	
83 30 2 333 891		Long Security Torx Socket	BMW	ALL,	04 08 14
81 43 2 357 248		Spider windshield Removal Tool	BMW	ALL,	04 12 14
83 30 2 338 099		Oil service tool	BMW	ALL,	
83 30 2 359 116		Torx bit insert set	BMW	ALL,	
83 30 0 496 569	009 325	Trim Panel Wedge	BMW	ALL,	
83 30 0 496 570	009 326	Multipurpose Wedge	BMW	ALL,	
83 30 2 405 263		Antenna Test Cable	BMW	ALL,	
83 30 2 405 335		Antenna Port Test Cable	BMW	ALL,	
83 30 0 496 833	614 340	Crimping die	BMW	ALL,	
83 30 0 495 058	230 272	spindle	BMW	ALL,	
83 30 0 494 597	110 420	press piece	BMW	ALL,	
83 30 2 420 068		Die for Antenna Contacts	BMW	ALL,	04 19 16
83 30 2 420 078		Die for Tab Connector Contacts	BMW	ALL,	04 19 16
83 30 2 420 079		Die for Round Plug Contacts/Sleeves	BMW	ALL,	04 19 16
83 30 0 491 818	261 110	Holder - shaft	BMW	ALL,	
81 43 9 429 204		Hand held Riveting Set Zs 308	BMW	ALL,	
83 30 2 413 037		Seal Driver Handle	BMW	ALL,	
83 30 0 491 151	127 010	EML test adapter	BMW	ALL,	
83 30 0 491 153	127 012	EML cable adapter	BMW	ALL,	
83 30 0 491 256	133 010	Hose clamp	BMW	ALL,	
83 30 0 491 384	170 000	Coolant system pressure tester	BMW	ALL,	

Order P/N	6 digit P/N	Description	Brand	Series	SIB
83 30 0 495 382	610 300	Electrical Connector Release Kit	MINI	ALL,	
83 30 0 420 667		Alcohol Detection Test Tool	MINI	ALL,	
83 30 0 496 306	118 732	Sealing ring for adapter 11 8 730/731	MINI	ALL,	04 13 07
83 30 0 433 207		Evaporative System Test Adapter	MINI	ALL,	04 06 07
83 30 0 495 505	510 300	Installation roller	MINI	ALL,	04 08 06
83 30 0 495 588	161 080	Hose Guide	MINI	ALL,	04 06 06
83 30 0 495 408	610 400	Pin Removal Tool	MINI	ALL,	04 01 07
83 30 0 493 839	212 170	SAC clamping fixture	MINI	ALL,	
83 30 0 496 465	510 350	Striker Adapter	MINI	ALL,	04 08 08
81 64 9 424 055		Hazet Square Drive Set	MINI	ALL,	04 03 03
83 30 0 496 537	520 000	Seat Occuoancy Adapter Cable	MINI	ALL,	04 09 08
81 43 2 155 739		Hand-held Tiveting Tool	MINI	ALL,	04 02 09
83 30 0 496 222	645 120	Testing adapter set for AC system	MINI	ALL,	64 01 08
83 30 0 496 852	006 100	Support Fixture	MINI	ALL,	04 03 09
83 30 0 496 956	006 150	Bracket Tool	MINI	ALL,	04 03 09
83 30 0 496 565	135 160	Fuel Line Plugs	MINI	ALL,	04 04 09
83 30 0 496 698	230 120	Extractor	MINI	ALL,	04 07 09
81 38 0 439 381		ICOM Extension Cable	MINI	ALL,	
83 30 0 496 714	009 030	A/C O-ring Tool	MINI	ALL,	04 15 09
81 64 2 162 483	345 137	Heavy duty puller	MINI	ALL,	04 13 09
81 39 2 152 473		Vacuum Charger for Cooling System	MINI	ALL,	04 07 11
81 64 2 298 613		Electronic torque angle wrench 10-100Nm	MINI	ALL,	
81 64 2 298 612		Electronic torque angle wrench 20-200Nm	MINI	ALL,	
83 30 2 299 561		Cable Set for Test Box	MINI	ALL,	04 04 12
81 64 2 294 518		MINI Output Shaft Supplementary Kit	MINI	ALL,	04 06 12
81 64 2 294 517		MINI output shaft adapter kit	MINI	ALL,	04 06 12
81 64 2 155 744		TKR Hydraulic Pump	MINI	ALL,	04 06 12
81 64 2 318 661		Torque Wrench Adapter	MINI	ALL,	04 07 12
81 43 2 326 501		Wire Pull Handle with Suction Cup	MINI	ALL,	04 09 12
83 30 2 236 537		Decal 87/88 For Cartool Toolboard	MINI	ALL,	
83 30 2 209 766		Adapter	MINI	ALL,	04 10 11
83 30 0 496 588	610 250	Power Outlet Release Tool	MINI	ALL,	04 02 10
81 64 2 184 117		Hose Pinch Pliers	MINI	ALL,	04 04 11
83 30 2 354 941		Sunroof Frame Centering Pins	MINI	ALL,	
83 30 0 492 412	334 155	Nut for spindle	BMW	ALL,	
83 30 0 495 212		Crimping Pliers for Wire End Ferrules	MINI	ALL,	04 13 12
83 30 2 336 541		Wire punch tool for window seal	MINI	ALL,	
81 43 2 339 719		Interior Protector	MINI	ALL,	
83 30 2 298 505		Panel Wedge	MINI	ALL,	
83 30 2 298 504		Panel Wedge	MINI	ALL,	
83 30 0 493 186	614 390	60 Pin break out box	MINI	ALL,	
83 30 0 493 962	614 380	Break out box	MINI	ALL,	
81 39 2 361 943		Transport Mode Switching Device: TMSD	MINI	ALL,	04 11 14
83 30 2 405 263		Antenna Test Cable	MINI	ALL,	
83 30 2 405 335		Antenna Port Test Cable	MINI	ALL,	
83 30 0 496 731	614 180	V adapter cable 48 pin	MINI	ALL,	
83 30 0 495 747	118 580	T60 Torx Socket	MINI	ALL,	
83 30 0 492 043	323 050	Assembly sleeves	BMW	E31,E34,E28,E32,E39,E23,E24,E36,E38,E30,	
83 30 0 492 025	322 070	Puller	BMW	E36,E30,	
83 30 0 492 121	331 360	Puller	BMW	E34,E28,E32,E23,E24,E30,	
83 30 0 491 961	313 150	Wrench	BMW	E28,E32,E23,E24,E30,	
83 30 0 492 024	322 050	Puller	BMW	E31,E34,E28,E32,E23,	
83 30 0 491 963	313 170	Wrench	BMW	E34,E28,E32,E36,E30,	
83 30 0 492 027	322 100	Wrench 27mm	BMW	E30,	
83 30 0 492 028	322 110	Wrech 32 mm	BMW	E30,	
83 30 0 492 766	611 459	26 pin break out box	BMW	E23,	
83 30 0 492 456	341 060	Pistone pliers	BMW	E28,E23,E24,	
83 30 0 490 511	009 210	wiper gauge	BMW	E34,E32,E23,	
83 30 0 491 123	121 090	crimping pliers	BMW	E23,E24,	
83 30 0 492 629	513 059	windshield tool	BMW	E23,E24,	
83 30 0 491 873	311 110	Puller	BMW	E34,E28,E32,E23,E24,	
83 30 0 492 370	334 060	Drift	BMW	E34,E28,E32,E23,E24,	
83 30 0 492 372	334 080	Adapter	BMW	E34,E28,E32,E23,E24,	
83 30 0 492 110	331 340	Installer	BMW	E34,E28,E32,E39,E23,E24,E38,	
83 30 0 492 086	331 190	Drift	BMW	E34,E28,E23,E24,	
83 30 0 491 896	312 080	Socket 46 mm	BMW	E34,E28,E23,E24,E36,	
83 30 0 492 087	331 200	Drift	BMW	E34,E32,E23,E24,	
83 30 0 492 736	611 300	Pliers	BMW	E28,E23,E30,	
83 30 0 492 090	331 230	Drift	BMW	E28,E32,E23,E30,	
83 30 0 492 669	521 000	armrest socket	BMW	E23,E24,	
83 30 0 491 898	312 100	Puller	BMW	E31,E34,E28,E32,E24,E36,E30,	
83 30 0 491 868	311 050	Sleeve	BMW	E34,E28,E32,E24,	

Order P/N	6 digit P/N	Description	Brand	Series	SIB
83 30 0 492 023	322 040	Puller	BMW	E34,E28,E24,	
83 30 0 492 670	521 100	Pivot pin installer	BMW	E34,E32,E24,E30,	
83 30 0 491 988	321 050	pressing tool	BMW	E28,E23,E24,	
83 30 0 492 073	331 010	Holder	BMW	E34,E28,E32,E30,	
83 30 0 491 905	312 110	Installer	BMW	E28,E36,	
83 30 0 491 924	312 160	Control arm remover	BMW	E30,	
83 30 0 491 824	271 050	Oil seal puller	BMW	E30,	
83 30 0 491 825	271 080	Seal driver	BMW	E30,	
83 30 0 492 811	613 010	Relay test kit	BMW	E30,	
83 30 0 491 156	127 020	Primary adapter	BMW	E30,	
83 30 0 490 734	111 280	Drift	BMW	E28,E24,E30,	
83 30 0 491 720	244 044	Hold down bolts	BMW	E31,E32,E30,	
83 30 0 491 959	313 130	Sleeves	BMW	E34,E36,E30,	
83 30 0 491 154	127 013	EML safety path adapter	BMW	E31,	
83 30 0 492 902	619 020	Electrical connector kit	BMW	E31,	
00 00 0 000 000	619 020	Electrical connector kit #4	BMW	E31,	
83 30 0 492 714	611 140	Pin removal kit	BMW	E31,	
83 30 0 492 838	614 430	Multimeter extension	BMW	E31,	
83 30 0 492 843	614 460	E31 cable set	BMW	E31,	
83 30 0 492 487	343 220	Holding jaws	BMW	E31,E32,	
83 30 0 492 475	343 110	ASC T Wrench	BMW	E31,E34,E32,E39,E36,E38,	
83 30 0 491 454	230 490	Transmission seal puller	BMW	E31,E34,E39,E36,	
83 30 0 491 789	245 490	Seal Guide	BMW	E31,E34,E38,	
83 30 0 490 804	112 006	Base plate	BMW	E31,E38,	
83 30 0 491 057	115 110	Crankshaft seal installer	BMW	E31,E38,	
83 30 0 490 885	112 420	Crankshaft holder	BMW	E31,E38,	
83 30 0 492 252	333 180	Press	BMW	E31,E86,E85,E46,	
83 30 0 490 478	005 591	Module puller	BMW	E32,	
83 30 0 492 782	611 476	Fused test lead	BMW	E32,	
83 30 0 493 066	641 160	Test cable	BMW	E32,	
83 30 0 490 509	009 200	Windshield Washer Adjustment tool	BMW	E32,	
81 23 9 415 811		Rivet pliers	BMW	E32,	
83 30 0 491 917	312 140	Thrust rod remover	BMW	E34,E32,	
83 30 0 492 587	511 110	Rain gutter tool	BMW	E34,E32,	
83 30 0 492 338	333 420	Final drive drift	BMW	E34,E32,E36,	
83 30 0 492 340	333 440	Final drive drift	BMW	E34,E32,E36,	
83 30 0 492 341	333 450	Final drive drift	BMW	E34,E32,E36,	
83 30 0 492 602	512 130	Rear window strut tool	BMW	E34,	
83 30 0 492 641	513 110	Spanner	BMW	E34,	
83 30 0 492 642	513 120	Spanner	BMW	E34,	
83 30 0 492 733	611 230	Rear washer aligner	BMW	E34,	
83 30 0 494 071	611 456	V adapter cable 26 pin	BMW	E34,	
83 30 0 492 734	611 240	Rear washer spanner	BMW	E34,	
83 30 0 491 773	245 250	Seal installer	BMW	E31,E34,E38,	
83 30 0 492 346	334 000	Support	BMW	E34,	
83 30 0 491 435	215 030	Clutch bleeder tool	BMW	E34,E39,E36,E38,	
83 30 0 491 570	232 260	Drift	BMW	E34,	
83 30 0 492 343	333 470	Final drive drift	BMW	E34,E32,E36,	
83 30 0 491 425	212 140	Clutch alignment tool	BMW	E34,E36,	
83 30 0 491 781	245 360	Seal remover	BMW	E34,E36,	
83 30 0 491 763	245 150	Alignment pins	BMW	E34,E39,E36,	
83 30 0 491 767	245 190	Pressure adapter	BMW	E34,E39,E36,	
83 30 0 491 768	245 200	Driving mandrel	BMW	E34,E39,E36,	
83 30 0 491 606	233 100	Transmission cup tool	BMW	E36,	
83 30 0 492 690	543 160	2,5mm allen socket	BMW	E36,	
83 30 0 492 108	331 312	Mandrel	BMW	E36,	
83 30 0 492 180	332 121	Spindle	BMW	E36,	
83 30 0 492 339	333 430	Input seal driver	BMW	E36,	
83 30 0 492 342	333 460	Output seal driver	BMW	E36,	
83 30 0 492 344	333 480	Input seal driver	BMW	E36,	
83 30 0 492 571	416 200	Alignment gauge	BMW	E36,	
83 30 0 492 296	333 270	Support frame	BMW	E36,	
81 64 2 160 009		Hydraulic Wheel Bearing	BMW	E36,	04 13 10
83 30 0 491 340	136 050	Pressure sensor adapter set	BMW	E36,	
83 30 0 492 345	333 490	drift	BMW	E34,E32,E36,	
83 30 0 494 141	241 350	Piston cover remover	BMW	E39,E36,	04 21 02
83 30 0 491 992	321 090	Securing ring press	BMW	E31,E34,E32,E36,E38,	
83 30 0 492 447	334 240	Seal Press	BMW	E36,E38,	
83 30 0 494 888	234 020	Drift set for Locking Pins	BMW	E53,E39,E36,E46,	04 22 04
83 30 0 491 764	245 160	Alignment pins	BMW	E34,E36,	
83 30 0 492 332	333 354	Spacer	BMW	E36,E38,	
83 30 0 494 500	233 110	Drift	BMW	E53,E39,E36,E46,	04 26 02

Order P/N	6 digit P/N	Description	Brand	Series	SIB
83 30 0 495 393	610 311	Holding sleeve	BMW	E39,E36,E38,E46,	04 06 00
83 30 0 493 427	180 050	Catalytic converter wire remover	BMW	E38,	
83 30 0 491 078	117 310	Engine support	BMW	E38,	
83 30 0 492 509	350 010	Installation plate	BMW	E38,	
83 30 0 490 708	111 072	Retaining bracket	BMW	E38,	
83 30 0 492 882	616 070	ELA pin connector	BMW	E38,	
83 30 0 492 890	616 080	Plug housing	BMW	E38,	
83 30 0 492 893	616 090	Plug housing	BMW	E38,	
83 30 0 493 640	161 022	fuel level sender spanner jaws	BMW	E39,E38,E46,	04 03 00
83 30 0 493 854	630 410	LCM Test Cable	BMW	E38,	04 03 06
83 30 0 491 774	245 260	Seal puller	BMW	E31,E34,E38,	
83 30 0 493 363	116 420	VANOS socket	BMW	E39,E38,	04 12 98
83 30 0 493 364	116 430	Assembly gasket	BMW	E39,E38,	04 12 98
83 30 0 493 365	116 440	Camshaft adjuster	BMW	E39,E38,	04 12 98
83 30 0 493 389	116 450	Alignment tool	BMW	E39,E38,	04 12 98
83 30 0 491 775	245 270	Seal driver	BMW	E39,E38,	
83 30 0 491 152	161 160	Tank ventilation leak couplers	BMW	E39,E38,	04 01 98
83 30 0 493 596	312 263	Bushing sleeve	BMW	E39,E38,	04 23 00
83 30 0 493 626	631 010	Xenon test cable	BMW	E39,E38,E46,	04 07 01
83 30 0 493 429	126 050	VANOS switching unit	BMW	E39,	04 15 99
83 30 0 493 442	110 270	Holding Lever	BMW	E39,	04 13 99
83 30 0 493 386	117 120	Securing Pin	BMW	E39,	04 13 99
83 30 0 493 430	117 130	VANOS Charging adapter	BMW	E39,	04 13 99
83 30 0 493 428	117 140	Locking clips	BMW	E39,	04 13 99
83 30 0 493 432	117 150	VANOS Spanner	BMW	E39,	04 13 99
83 30 0 493 453	130 150	Throttle Valve Synchronizer	BMW	E39,	04 13 99
83 30 0 493 591	112 386	Thrust Plate	BMW	E39,	04 13 99
83 30 0 494 737	117 231	Seal Aligner	BMW	E39,	04 13 99
83 30 0 493 589	117 210	Seal Press	BMW	E39,	04 13 99
83 30 0 493 433	117 180	Piston Ring Pliers	BMW	E39,	04 13 99
83 30 0 493 464	110 260	Engine Hoist Frame	BMW	E39,	04 13 99
83 30 0 493 444	111 490	Pressure Testing Plates	BMW	E39,	04 13 99
83 30 0 491 875	311 400	Tension rod test gauge	BMW	E39,	
83 30 0 491 788	245 370	Seal installer	BMW	E39,	
83 30 0 492 738	611 320	Rear wiper alignment gauge	BMW	E39,	04 05 99
83 30 0 492 604	512 150	Tailgat gas spring tool	BMW	E39,	04 05 99
83 30 0 493 764	230 110	Transmission support fixture	BMW	E31,E39,	04 03 01
83 30 0 492 448	334 250	Drift	BMW	E39,E38,	
83 30 0 491 661	240 250	Transmission support	BMW	E39,E38,	
83 30 0 493 155	613 300	EWS ring remover	BMW	E39,E38,E46,	
83 30 0 493 654	246 070	GM5 diagnostic cable	BMW	E39,E46,	04 21 00
83 30 0 490 988	113 410	Valve Board	BMW	E46,	04 11 03
83 30 0 493 739	114 380	Camshaft fixture	BMW	E46,	04 01 01
83 30 0 493 749	119 130	Camshaft adjusting gauge	BMW	E46,	04 01 01
83 30 0 493 750	119 140	Camshaft timing gauge	BMW	E46,	04 01 01
83 30 0 493 838	119 170	VANOS spacer	BMW	E46,	04 01 01
83 30 0 493 805	117 160	VANOS spanner wrench	BMW	E46,	04 01 01
83 30 0 493 754	113 163	Feeler gauge	BMW	E46,	04 01 01
83 30 0 493 743	114 400	Magnetic holder	BMW	E46,	04 01 01
83 30 0 493 843	110 280	Brace	BMW	E46,	04 01 01
83 30 0 493 748	119 120	Piston ring compressor	BMW	E46,	04 01 01
83 30 0 493 742	114 390	Oil pressure adapter	BMW	E46,	04 01 01
83 30 0 493 755	119 160	Clamping pliers	BMW	E46,	04 01 01
83 30 0 493 751	119 150	Flex adapter	BMW	E46,	04 01 01
83 30 0 493 902	121 120	Release lever	BMW	E46,	04 01 01
83 30 0 493 756	111 404	Sealing plates	BMW	E46,	04 01 01
83 30 0 494 195	333 181	Bushing tool	BMW	E46,	04 16 01
83 30 0 494 383	127 050	Secondary voltage test cable	BMW	E46,	04 27 01
83 30 0 493 847	117 240	Seal installer	BMW	E46,	04 28 01
83 30 0 491 086	117 342	Locking pin	BMW	E46,	04 28 01
83 30 0 495 519	311 071	Ball Joint Tester Adapter	BMW	E46,	04 14 06
83 30 0 495 558	311 079	Adhesive Pad	BMW	E46,	04 14 06
83 30 0 493 801	230 230	Engine spacer	BMW	E46,	04 22 00
83 30 0 493 815	311 170	Output shaft remover	BMW	E46,	04 22 00
83 30 0 494 197	345 250	47 pin test cable	BMW	E46,	04 25 01
83 30 0 494 529	131 140	Fuel injector installation fixture	BMW	E46,	04 06 03
83 30 0 493 814	614 300	DIS OBD cable	BMW	E46,	04 14 00
83 30 0 493 961	651 110	Wide screen monitor tool	BMW	E46,	04 33 01
83 30 0 493 635	416 250	Adjustment Gauge	BMW	E46,	04 12 00
83 30 0 493 689	611 330	Alignment Tool	BMW	E46,	04 10 00
83 30 0 494 046	334 210	Rubber mount remover jaws	BMW	E46,	
83 30 0 493 920	230 240	Drift pin remover	BMW	E46,	04 07 02

Order P/N	6 digit P/N	Description	Brand	Series	SIB
83 30 0 493 272	611 139	contact remover tool	BMW	E39,E38,E46,	04 06 00
83 30 0 493 396	614 350	23 pin test cable	BMW	E39,E38,E46,	04 06 00
83 30 0 493 401	616 050	6 pin oval test cable	BMW	E39,E38,E46,	04 06 00
83 30 0 494 641	271 380	Seal Installer	BMW	E53,E46,	04 13 04
83 30 0 493 551	271 340	Seal Installation tool	BMW	E53,E46,	04 12 03
83 30 0 493 549	271 360	Drift	BMW	E53,E46,	04 12 03
83 30 0 494 640	271 370	Drift	BMW	E53,E46,	04 12 03
83 30 0 493 806	221 017	Transfer case nut	BMW	E46,	04 09 03
83 30 0 493 688	333 280	Control arm alignment gauge	BMW	E36,E46,	04 19 00
83 30 0 493 415	657 110	MRS 3 Test Cable	BMW	E39,E38,E46,	04 11 99
83 30 0 494 326	311 060	Ball Joint Tester	BMW	E53,E46,	04 03 03
83 30 0 494 492	002 240	Plastic rivet pliers	BMW	E53,E46,	04 23 03
83 30 0 494 543	233 200	Extractor	BMW	E53,E83,E60,E46,	04 23 04
83 30 0 494 546	233 210	Extractor	BMW	E53,E83,E60,E46,	04 23 04
83 30 0 494 651	233 220	Installer	BMW	E53,E83,E60,E46,	04 23 04
83 30 0 494 652	233 230	Installer	BMW	E53,E83,E60,E46,	04 23 04
83 30 0 494 872	331 154	Adapter plate	BMW	E53,E83,E60,E46,	04 23 04
83 30 0 494 758	230 135	Gearbox support	BMW	E85,E46,	
83 30 0 495 604	541 110	Sunroof centering pins	BMW	E61,E53,E83,E91,	04 23 06
83 30 0 495 125	115 310	Rear Seal Installer	BMW	E60,	
83 30 0 494 650	212 240	Grease Scraper tool	BMW	E60,	
83 30 0 495 626	212 280	Clutch Centering Tool	BMW	E60,	04 34 06
83 30 0 495 627	233 240	Input shaft seal tool	BMW	E60,	04 34 06
83 30 0 495 124	115 300	Camshaft fixture TDC	BMW	E60,	04 28 05
83 30 0 493 143	116 250	Backlash dial indicator	BMW	E60,	04 02 06
83 30 0 493 129	110 235	Compression Tester	BMW	E60,	04 18 06
83 30 0 494 649	212 230	Clutch centering tool	BMW	E60,	04 17 04
83 30 0 495 240	221 040	Transfer case mount remover	BMW	E60,	04 16 05
83 30 0 495 255	244 310	Seal Installer	BMW	E60,	04 16 05
83 30 0 495 241	271 430	Seal Instaler	BMW	E60,	04 16 05
83 30 0 495 242	271 440	Seal Installer	BMW	E60,	04 16 05
83 30 0 495 243	271 450	Seal Installer	BMW	E60,	04 16 05
83 30 0 495 235	315 200	Pliers	BMW	E60,	04 16 05
83 30 0 495 251	314 070	Support brackets	BMW	E60,	04 16 05
83 30 0 494 868	324 155	Clamping fork	BMW	E63,E60,	04 05 04
83 30 0 494 968	652 010	Antenna Knife	BMW	E65,E60,E66,	04 04 05
83 30 0 494 833	641 480	AC sprayer wand	BMW	E61,E64,E63,E60,	04 29 05
83 30 0 494 762	212 050	Flywheel bearing tool set	BMW	E63,E60,	04 08 04
83 30 0 495 069	121 305	Zero-Coded Cover	BMW	E65,E64,E63,E60,E66,	04 02 05
83 30 0 494 711	334 272	Bushing Sleeve Tool	BMW	E60,	04 37 06
83 30 0 495 239	651 170	CD Magazine Eject Tool	BMW	E60,	04 14 05
81 43 0 301 745		V2A Stud/punch rivet extractor	BMW	E61,E64,E63,E60,	04 08 05
81 43 0 301 740		Flame coating primer kit	BMW	E61,E64,E63,E60,	04 08 05
81 49 0 301 738		Adhesive gun	BMW	E61,E64,E63,E60,	04 08 05
81 64 9 429 218		Body panel tool set	BMW	E61,E64,E63,E60,	04 08 05
81 64 9 429 291		Tool storage cart	BMW	E61,E64,E63,E60,	04 08 05
81 42 0 017 566		Lamella curtain	BMW	E61,E64,E63,E60,	04 08 05
81 43 0 020 819		Belt Grinder	BMW	E61,E64,E63,E60,	04 08 05
81 43 0 303 336		Rod grinder	BMW	E61,E64,E63,E60,	04 08 05
81 43 0 301 742		Stud Welder	BMW	E61,E64,E63,E60,	04 08 05
81 43 0 303 337		Rod grinder accessory set	BMW	E61,E64,E63,E60,	04 08 05
83 30 0 494 969	334 233	Rear Axle Carrier Support	BMW	E64,E63,E60,	04 26 04
83 30 0 494 518	641 040	AC belt tool	BMW	E65,E64,E63,E60,	04 25 04
83 30 0 494 906	512 196	Protective side	BMW	E65,E64,E63,E60,E66,E85,	04 15 04
83 30 0 494 729	610 060	Fiber optic protective cap	BMW	E65,E60,E66,E85,	04 27 03
83 30 0 495 318	521 010	OC3 Seat occupancy cable	BMW	E65,E83,E60,E66,E90,E85,	
83 30 0 494 818	245 307	Transmission Support Posts	BMW	E61,E53,	
83 30 0 494 730	411 110	Febder adjusting wrench	BMW	E64,E63,	04 10 04
83 30 0 494 786	621 120	Head-Up Display Adjustment Tool	BMW	E64,E63,	04 04 04
83 30 0 493 922	119 400	Engine stand support	BMW	E65,	04 09 02
83 30 0 494 149	119 430	Pressure fixture	BMW	E65,	04 09 02
83 30 0 494 181	323 145	Camber adjustment tool	BMW	E65,E53,	04 06 02
83 30 0 494 797	332 160	Spacer Ring	BMW	E65,E53,E64,E83,E63,E66,	
83 30 0 493 771	361 100	Wheel Clamp adapter	BMW	E65,E66,	04 16 03
83 30 2 213 038	313 381	Top spring retainer	BMW	E65,E66,	04 13 03
83 30 2 213 039	313 382	Bottom spring retainer	BMW	E65,E66,G20,	04 13 03
83 30 2 213 040	313 364	Spring Retainer Insert	BMW	E65,E66,	04 13 03
83 30 0 494 542	321 300	Release Fork	BMW	E65,E66,	04 20 03
83 30 0 494 156	611 190	Ribbon Cable Pliers	BMW	E65,E66,	04 10 03
83 30 0 494 541	312 230	Strut Wrench	BMW	E65,E66,	04 20 03
83 30 0 494 363	513 250	Door Handle Release Tool	BMW	E65,E66,	04 23 02
83 30 0 494 321	621 340	Airbag Adapter Cable Set	BMW	E65,E66,	04 05 03

Order P/N	6 digit P/N	Description	Brand	Series	SIB
83 30 0 494 219	612 210	5 pin widow test cable	BMW	E65,E66,	04 14 02
83 30 0 494 196	121 310	MKA Multi-channel adapter	BMW	E65,E66,	
83 30 0 493 951	612 140	9 Pin adapter cable	BMW	E65,E66,	04 15 02
83 30 0 493 938	119 260	Flywheel Lock	BMW	E65,E66,	04 15 02
83 30 0 494 733	411 120	Door Brake Ball Pliers	BMW	E65,E66,	04 09 04
83 30 0 494 515	641 460	AC sprayer wand	BMW	E65,E66,	04 07 04
81 10 0 021 292		ACC Adjustment Device	BMW	E65,E66,	04 16 03
83 30 0 494 635	361 130	ACC Adjuster	BMW	E65,E66,	04 20 03
83 30 0 494 310	117 280	Piston ring pliers	BMW	E66,	
83 30 0 493 583	118 150	Cylinder wall protector	BMW	E66,	04 15 03
83 30 0 494 819	130 130	Residual Fuel Collection Device	BMW	E66,	04 28 04
83 30 0 494 317	119 455	Crankshaft Shim	BMW	E66,	04 07 03
83 30 0 494 660	110 170	Injector Ring Kit	BMW	E66,	04 19 03
83 30 0 495 908	371 150	Hydraulic Line Tool	BMW	E70,	
83 30 0 496 521	002 230	Blind rivet Pliers for plastic rivets	BMW	E70,E71,	04 06 09
83 30 0 496 851	221 050	Rubber Bushing Mount Tool	BMW	E70,F25,E71,	04 03 11
83 30 0 496 009	335 200	Rear diff. support	BMW	E70,E92,E90,	04 22 08
83 30 0 496 681	614 240	Electromechanical Parking Brake Test Cable	BMW	E70,F02,F01,	04 17 10
83 30 0 496 697	000 421	Decal Set	BMW	E70,F02,F01,	04 17 10
83 30 0 490 857	112 260	Piston Ring Compressor	BMW	E70,E90,	04 14 08
83 30 0 494 837	314 050	Take up set	BMW	E93,E70,E83,	
83 30 0 496 405	330 120	Drift	BMW	E70,E71,	04 10 08
83 30 0 496 406	330 130	Drift	BMW	E70,E71,	04 10 08
83 30 0 496 404	330 110	Mouldings (set)	BMW	E70,E71,	04 10 08
83 30 0 496 685	006 070	Support Legs	BMW	E93,E92,E82,E90,E91,	
83 30 0 496 201	513 303	Door Window Adjustment tools	BMW	E83,E82,	04 04 08
83 30 0 496 202	513 304	Door Window Adjustment tools	BMW	E83,E82,	04 04 08
83 30 0 496 310	334 286	Bushing press spacer	BMW	E83,E85,	04 02 08
83 30 0 494 451	244 160	Converter Securing Device	BMW	E83,E90,	
83 30 0 495 528	110 480	Crankshaft Alignment Pin	BMW	E85,	04 21 07
83 30 0 495 575	334 426	Final Drive Support Adapter	BMW	E85,	04 23 07
83 30 0 495 506	009 350	E box template	BMW	E60,E85,	
83 30 0 495 507	009 360	Template	BMW	E60,E85,	
83 30 0 495 623	334 285	Installation Shim	BMW	E86,E85,	04 33 06
83 30 2 158 083	NA	Male Quick Disconnect Adaptor	BMW	E89,	04 06 10
81 43 2 239 966		Insertion Mandrel & M10	BMW	E89,F25,	04 20 11
83 30 0 496 706	540 210	Gas Support Tool	BMW	E93,E89,	04 16 10
83 30 2 320 299		EMF Pin Wrench	BMW	E89,F13,F25,F12,F10,	04 01 13
83 30 0 495 486	241 370	Torque converter brace	BMW	E90,E91,	04 36 06
83 30 0 495 485	315 220	Support	BMW	E90,E91,	04 36 06
83 30 0 495 346	616 100	Windshield Wiper Arm Adjustment Gauge	BMW	E90,E91,	04 13 06
83 30 0 495 593	335 080	Seal Installer	BMW	E70,E92,E90,E91,	
83 30 0 496 388	330 100	Fixture	BMW	E93,E92,E90,	04 08 08
83 30 0 495 355	323 146	Camber adjuster parts	BMW	E90,E91,	04 05 06
83 30 0 495 356	323 147	Camber adjuster parts	BMW	E90,E91,	04 05 06
83 30 0 495 339	334 350	Bearing Tool	BMW	E90,E91,	04 05 06
83 30 0 495 495	612 240	CAS Test Cable	BMW	E90,E91,	04 11 06
83 30 0 495 477	610 230	Crimping Die	BMW	E90,E91,	04 10 06
83 30 0 495 457	616 110	Wiper Tool Kit	BMW	E90,E91,	04 13 06
83 30 0 495 444	241 360	Converter Locking Device	BMW	E90,E91,	04 26 07
83 30 0 495 374	314 080	Support Adapters	BMW	E90,E91,	04 26 07
83 30 0 495 551		Opened Jaw Spanner	BMW	E70,E92,E90,E91,	
83 30 0 495 552	335 050	Multi-Point Ring Spanner	BMW	E70,E92,E90,E91,	
83 30 0 495 553	335 060	Multi-Toothed Socket	BMW	E70,E92,E90,E91,	
83 30 0 495 554	335 070	Telescoping Extension	BMW	E70,E92,E90,E91,	
83 30 0 496 315	413 200	Roof Clamp Set	BMW	E92,	04 05 08
81 49 0 443 166		Pneumatic Adhesive Gun	BMW	E92,	04 05 08
83 30 0 496 346	119 950	Valve Spring Collar	BMW	E92,	04 11 08
83 30 0 496 355	315 270	Tension Strap	BMW	E92,	04 11 08
83 30 0 496 350	119 960	Pressure Test Cover	BMW	E92,	04 11 08
83 30 0 495 591	513 310	Ratchet Wrench	BMW	E92,	04 22 06
83 30 0 496 270	119 970	Camshaft Fixture Set	BMW	E92,	04 01 08
83 30 0 496 274	119 980	Extraction Tool	BMW	E92,	04 01 08
83 30 0 496 269	119 990	Engine Brace	BMW	E92,	04 01 08
83 30 0 496 293	315 230	Strut Tool	BMW	E92,	04 01 08
83 30 0 495 529	234 030	Pilot Bearing Tool	BMW	E92,	04 19 07
83 30 0 495 449	212 270	Clutch Alignment Tool	BMW	E60,	04 14 07
83 30 2 210 777		Update Kit - Strut Mounting Tool	BMW	F01,	04 27 11
81 43 2 158 708		Punch Riveting Tool	BMW	F01,	04 01 10
81 43 2 166 364		Punch Rivet Insert Aid Tool	BMW	F01,	04 16 11
83 30 0 496 321	161 190	Pin Spanner	BMW	F02,F01,	04 07 09
83 30 0 496 719	241 410	Seal Installation Tool	BMW	F02,F01,	04 36 09

Order P/N	6 digit P/N	Description	Brand	Series	SIB
83 30 0 496 716	241 420	Seal Removal Tool	BMW	F02,F01,	04 36 09
83 30 0 496 715	241 430	Holding Pins	BMW	F02,F01,	04 36 09
83 30 0 496 717	241 440	Positioning Pins	BMW	F02,F01,	04 36 09
83 30 0 496 718	245 367	Selector Shaft Seal Remover	BMW	F02,F01,	04 36 09
83 30 0 496 659	310 000	Strut Mount Tool	BMW	F02,F01,	04 10 10
83 30 0 496 471	614 000	14-Pin V-Adapter Cable	BMW	F02,F01,	04 05 09
83 30 0 496 473	614 020	26-Pin V-Adapter Cable	BMW	F02,F01,	04 05 09
83 30 0 496 474	614 030	3-Pin V-Adapter Cable	BMW	F02,F01,	04 05 09
83 30 0 496 482	242 410	Adapter Ring	BMW	F02,F01,	04 07 09
83 30 0 496 483	323 220	Wrench WAF41	BMW	F02,F01,	04 07 09
83 30 0 496 514	330 040	Socket Wrench WAF18	BMW	F02,F01,	04 07 09
83 30 0 495 595	335 090	Holding Tool z37	BMW	F02,F01,	04 07 09
83 30 0 496 529	513 320	Windshield Assembly Aid	BMW	F02,F01,	04 07 09
83 30 0 496 389	330 000	Fixture	BMW	F02,F01,	04 07 09
83 30 0 496 522	330 050	Spindle with Nut	BMW	F02,F01,	04 07 09
83 30 0 496 390	330 010	Thrust piece (2 pieces)	BMW	F02,F01,	04 07 09
83 30 0 496 494	330 020	Fixture	BMW	F02,F01,	04 07 09
83 30 0 496 495	330 030	Fixture	BMW	F02,F01,	04 07 09
83 30 0 496 538	334 408	Clamping Ring	BMW	F02,F01,	04 07 09
83 30 0 496 539	334 409	Thrust Piece	BMW	F02,F01,	04 07 09
83 30 0 496 430	006 050	Supports	BMW	F02,F01,	04 07 09
83 30 0 496 530	514 100	Stamping Tool	BMW	F02,F01,	04 07 09
83 30 0 496 518	614 140	12-Pin V-Adapter Cable	BMW	F02,F01,	04 11 09
83 30 0 496 519	614 150	28-Pin V-Adapter Cable	BMW	F02,F01,	04 11 09
83 30 0 496 520	614 160	8-Pin V-Adapter Cable	BMW	F02,F01,	04 11 09
83 30 0 496 368	118 910	Engine support fixture	BMW	F02,F01,	04 10 09
83 30 0 496 532	513 330	Lever (2x)	BMW	F02,F01,	04 10 09
83 30 0 496 472	614 010	22-Pin V-Adapter Cable	BMW	F02,F01,	04 05 09
83 30 0 496 496	614 080	10-Pin V-Adapter Cable	BMW	F02,F01,	04 05 09
83 30 0 496 498	614 100	8-Pin V-Adapter Cable	BMW	F02,F01,	04 05 09
83 30 0 496 499	614 110	12-Pin V-Adapter Cable	BMW	F02,F01,	04 05 09
83 30 0 496 517	614 130	9-Pin V-Adapter Cable	BMW	F02,F01,	04 11 09
83 30 0 496 513	614 120	6-Pin V-Adapter Cable	BMW	F02,F01,	04 05 09
83 30 0 496 475	614 040	59-Pin V-Adapter Cable	BMW	E70,E90,F02,F01,	04 05 09
83 30 0 496 476	614 050	40-Pin V-Adapter Cable	BMW	E70,E90,F02,F01,	04 05 09
83 30 0 496 477	614 060	54-Pin V-Adapter Cable	BMW	E70,E90,F02,F01,	04 05 09
83 30 0 496 478	614 070	20-Pin V-Adapter Cable	BMW	E70,E90,F02,F01,	04 05 09
83 30 0 496 497	614 090	8-Pin V-Adapter Cable	BMW	E70,E90,F02,F01,	04 05 09
83 30 0 496 792	221 046	Transfer Box Bushing Tool	BMW	F07,F02,F01,	04 19 10
83 30 2 318 439		Flywheel Holder	BMW	F30H,F02H,F10H,	04 29 12
83 30 0 496 722		BatterySlide Rail	BMW	F10H,	04 11 12
83 30 2 296 491		Lifting Frame Tool	BMW	F30H,F10H,	04 11 12
83 30 2 296 511		Storage Tool	BMW	F30H,F10H,	04 11 12
83 30 2 297 311		Lifting Eye Tool	BMW	F30H,F10H,	04 11 12
83 30 2 297 312		Support Tool	BMW	F30H,F10H,	04 11 12
83 30 2 297 313		Vibration Damper Tool	BMW	F30H,F10H,	04 11 12
83 30 2 334 359		Dynamic Stability Control Cable	BMW	F06,F10,	04 07 13
83 30 2 230 142		Head Airbag Tool	BMW	F34,F32,F31,F30,F13,F06,F12,	04 16 13
83 30 2 303 794		EME Test Cable	BMW	F10,	
83 30 2 298 610		Seal Installer	BMW	F13,F12,F10,	04 25 12
83 30 0 496 883		Rivet Shank Collection Tool	BMW	F25,F10,	04 21 11
83 30 0 496 959		Driveshaft Wrench SW50	BMW	F25,F10,	04 01 11
83 30 2 318 833		Clamping Plates	BMW	F13,F12,F10,	04 31 12
83 30 2 304 586		Socket	BMW	F13,F12,F10,	04 31 12
83 30 2 214 012		22 Pin EMF Test Cable	BMW	F30,F13,F25,F12,F10,	04 25 11
83 30 2 220 057		6 Pin Evap System Test Cable	BMW	F30,F10,	04 24 11
83 30 2 296 785		LED Fan Tool	BMW	F13,F12,	04 09 12
83 30 2 239 369		ACSM4 Airbag 104 Pin Test Cable	BMW	F30,F25,F12,	04 29 11
83 30 2 232 315		ACSM4 Airbag 20 Pin Test Cable	BMW	F30,F25,F12,	04 29 11
83 30 2 296 872		Magnetizing Tool	BMW	F13,F12,	04 09 12
83 30 2 357 190		Target Gauge	BMW	F15,	04 27 14
83 30 2 409 707		Vibration Damper Support Tool	BMW	F15,	04 25 15
83 30 2 409 115		Thermostat Bridging Tool	BMW	F15,	04 25 15
83 30 2 365 943		HV Battery Pressure Adapter Update Kit	BMW	F15,	04 24 15
83 30 2 410 550		Electric Motor Electronics Test	BMW	F15,	04 01 16
83 30 2 496 932		Airbag Clip Release Tool	BMW	F25,F26,F15,	04 06 15
83 30 0 496 932	720 020	Airbag Clip Release Tool	BMW	F25,F26,F15,	04 06 15
83 30 2 365 291		B48 Drive Belt Tool	BMW	F23,F22,F32,F31,F30,	04 05 15
83 30 2 413 949		Clamping pliers	BMW	F25,F26,	04 14 16
83 30 2 348 128		Rivet Punch	BMW	F80,	
83 30 2 284 952		Swivel Arm	BMW	F30,	
83 30 2 360 086		HV Battery Lifting Fixture	BMW	F30,	

Order P/N	6 digit P/N	Description	Brand	Series	SIB
83 30 2 353 020		Engine Hood Support	BMW	F31,F30,	04 19 13
83 30 2 241 783		Rear Axle Spring Cup Set	BMW	F31,F30,	04 09 13
83 30 0 496 144	118 860	Connecting Rod Guides	BMW	F31,F30,	04 13 13
83 30 0 496 132	118 810	Seal Installer	BMW	F31,F30,	04 13 13
83 30 2 288 054		Counterbalance Gauge	BMW	F31,F30,F25,	04 03 16
83 30 2 365 377		Caliper Pin Wrench	BMW	F48,	04 09 16
83 30 2 414 889		Evaporator Leak Test Adapter	BMW	F48,	04 17 16
83 30 2 360 213		Strut Socket β SW18	MINI	F55,F56,	04 06 15
83 30 2 361 198		Headlight Fitting Tool	MINI	F55,F56,	04 07 15
64 51 2 413 653		Spray Lance	MINI	F55,F56,	
83 30 2 365 291		B48 Drive Belt Tool	MINI	F56,	04 02 15
83 30 2 361 286		B48 Extractor Tool	MINI	F56,	04 03 15
83 30 2 349 693		Centering Tool	BMW	F82,F83,F80,	04 17 15
83 30 2 348 126		SAC Clamping Fixture	BMW	F82,F83,F80,	04 17 15
83 30 2 355 850		Parking Lock Release Tool	BMW	F86,F85,	04 07 15
83 30 2 412 291		R1234yf A/C Service Port Adapter	BMW	G12,	04 12 16
83 30 2 414 636		Wheel Carrier Socket	BMW	G12,	04 21 16
83 30 0 495 141	230 350	Seal installer	MINI	R50,R52,	04 02 05
83 30 0 495 142	230 360	Seal Installer	MINI	R50,R52,	04 02 05
83 30 0 494 892	115 150	Adjustment spindle	MINI	R50,R53,	04 02 04
83 30 0 494 859	118 440	Vibration damper remover	MINI	R50,R53,	04 02 04
83 30 0 494 835	346 330	Handbrake cable release tool	MINI	R50,R53,	04 02 04
83 30 0 494 858	323 200	Tie rod wrench	MINI	R50,R53,	04 02 04
83 30 0 491 454	230 490	Seal Puller	MINI	R50,R52,	
83 30 0 494 911	244 200	Drift and slip bushing	MINI	R50,R52,	
83 30 0 495 051	212 260	Clutch centering tool	MINI	R50,R52,	04 01 05
83 30 0 494 914	244 210	WAF46 socket	MINI	R50,R52,	04 01 06
83 30 0 494 915	244 220	Extractor	MINI	R50,R52,	04 01 06
83 30 0 494 916	244 230	Bearing Installer	MINI	R50,R52,	04 01 06
83 30 0 495 052	245 410	Seal Removal tool	MINI	R50,R52,	04 06 04
83 30 0 495 053	245 420	Seal Installation tool	MINI	R50,R52,	04 06 04
83 30 0 494 501	161 170	Evaporative System Leak Test Tool	MINI	R50,R53,R52,	04 05 06
83 30 0 493 152	161 160	Tank Ventilation Leak Couplers	MINI	R50,R53,R52,	04 05 06
81 64 9 424 055		Hazet Square Drive Set	BMW	R50,R53,	04 03 03
83 30 0 490 475	005 500	Mandrel	MINI	R50,R53,	04 04 02
99 00 0 003 927		Seat Lever Tool	MINI	R50,R53,	04 05 02
00 00 0 000 000		Square drive torque wrench	MINI	R50,R53,	04 04 03
83 30 0 494 254	118 420	Valve assembly board	MINI	R50,R53,	04 06 03
83 30 0 494 268	118 430	Pressure Fixture	MINI	R50,R53,	04 06 03
83 30 0 494 312	118 500	Tube puller	MINI	R50,R53,	04 06 03
83 30 0 494 262	121 210	Tube installer	MINI	R50,R53,	04 06 03
83 30 0 494 362	119 000	Fixture	MINI	R50,R53,	04 06 03
83 30 0 490 798	112 000	Puller for crankshaft sprocket	MINI	R50,R53,	04 01 02
83 30 0 490 841	112 150	Holder for Measuring Breakers	MINI	R50,R53,	04 01 02
83 30 0 490 907	113 060	Check Engine Oil Pressure	MINI	R50,R53,	04 01 02
83 30 0 490 866	112 320	Timing case cover seal	MINI	R53,	04 04 05
83 30 0 496 623	114 310	Pressure Adapter	MINI	R57,R56,R55,	04 03 10
83 30 0 496 775	116 210	Drive Belt Tool	MINI	R57,R56,R55,	04 04 10
83 30 0 496 463	61 3 140	Adapter Cable for DSC	MINI	R56,R55,	04 01 09
83 30 0 496 089	216 110	Clutch Alignment Tool	MINI	R56,	04 15 07
83 30 0 496 088	130 220	Release tool	MINI	R56,	04 16 07
83 30 0 496 242	130 250	Release tool	MINI	R56,	04 16 07
83 30 0 492 467	341 260	Brake depth gauge	MINI	R60,R56,	
83 30 2 296 941	272 020	Mandrel	MINI	R60,	04 05 12
83 30 2 296 944	272 030	Mandrel	MINI	R60,	04 05 12
83 30 2 296 945	272 040	Mandrel	MINI	R60,	04 05 12
83 30 2 296 946	272 060	Puller	MINI	R60,	
83 30 2 296 947	272 070	Puller	MINI	R60,	04 05 12
83 30 2 296 950	272 080	Puller	MINI	R60,	04 05 12
83 30 2 230 142		Head Airbag Tool	MINI	R60,R61,	04 05 13
83 30 2 346 947		Tool for Front Bumper Service Position	MINI	R60,R61,	04 02 13
83 30 0 493 837	138 030	6 pin test cable	BMW	E53,E39,E46,	04 25 01
83 30 0 490 115	001 460	Engine supports	BMW	ALL,	
83 30 0 490 129	002 000	Torsion meter	BMW	ALL,	
83 30 0 490 152	002 180	6mm hex socket	BMW	ALL,	
83 30 0 490 441	004 210	Reamer kit	BMW	ALL,	
83 30 0 490 466	005 010	Puller	BMW	ALL,	
83 30 0 490 587	110 090	Mounting plate	BMW	ALL,	
83 30 0 490 599	110 166	Adapter hose	BMW	ALL,	
83 30 0 490 601	110 180	Valve board	BMW	ALL,	
83 30 0 490 653	111 010	Pressure testing set	BMW	ALL,	
83 30 0 490 691	111 050	Assembly accessories	BMW	ALL,	

Order P/N	6 digit P/N	Description	Brand	Series	SIB
83 30 0 490 725	111 210	Oil seal puller	BMW	ALL,	
83 30 0 490 726	111 220	Drift	BMW	ALL,	
83 30 0 490 727	111 230	Drift	BMW	ALL,	
83 30 0 490 729	111 260	Drift	BMW	ALL,	
83 30 0 490 771	111 440	Valve support tray	BMW	ALL,	
83 30 0 490 798	112 000	Puller	BMW	ALL,	
83 30 0 490 820	112 050	Guide	BMW	ALL,	
83 30 0 490 822	112 070	Flywheel holder	BMW	ALL,	
83 30 0 825	112 100	Flywheel lock	BMW	ALL,	
83 30 0 490 825	112 100	Flywheel lock	BMW	ALL,	
83 30 0 490 835	112 120	Flywheel lock	BMW	ALL,	
83 30 0 490 842	112 160	Flywheel lock	BMW	ALL,	
88 88 6 112 210		Seal guide	BMW	ALL,	
83 30 0 490 854	112 230	Holder	BMW	ALL,	
83 30 0 490 856	112 250	E12 Torx	BMW	ALL,	
83 30 0 490 859	112 280	Counter holder	BMW	ALL,	
83 30 0 490 861	112 300	Arbor	BMW	ALL,	
83 30 0 490 862	112 310	Seal extractor	BMW	ALL,	
83 30 0 490 865	112 313	Thrust pad	BMW	ALL,	
83 30 0 490 867	112 330	Assembly plate	BMW	ALL,	
83 30 0 490 900	113 010	Camshaft fixture	BMW	ALL,	
83 30 0 490 901	113 020	Crank turner	BMW	ALL,	
83 30 0 490 902	113 030	Tray	BMW	ALL,	
83 30 0 490 931	113 130	Valve device	BMW	ALL,	
83 30 0 490 942	113 160	Valve adjuster	BMW	ALL,	
83 30 0 490 945	113 170	Valve lever	BMW	ALL,	
83 30 0 490 947	113 190	Alignment tool	BMW	ALL,	
83 30 0 490 948	113 200	seal driver	BMW	ALL,	
83 30 0 490 949	113 210	Centering bushing	BMW	ALL,	
83 30 0 490 950	113 220	Guide sleeve	BMW	ALL,	
83 30 0 490 952	113 240	Camshaft locating fixture	BMW	ALL,	
83 30 0 490 956	113 250	Suction cups	BMW	ALL,	
83 30 0 490 957	113 251	Suction cups	BMW	ALL,	
83 30 0 490 959		Camshaft fixture	BMW	ALL,	
83 30 0 490 962	113 270	Camshaft removing fixture	BMW	ALL,	
83 30 0 490 965	113 280	Seal installer	BMW	ALL,	
83 30 0 490 966	113 290	Securing spring	BMW	ALL,	
83 30 0 490 969	113 300	Mounting plate	BMW	ALL,	
83 30 0 490 981	113 380	T50 torx socket	BMW	ALL,	
83 30 0 491 002	114 020	Oil filter wrench	BMW	ALL,	
83 30 0 491 048	115 050	Fan pulley holder	BMW	ALL,	
83 30 0 491 069	116 060	Special extension	BMW	ALL,	
83 30 0 491 127	121 160	Spark plug socket	BMW	ALL,	
83 30 0 491 128	121 170	Socket and torque converter	BMW	ALL,	
83 30 0 491 158	127 030	Secondary adapter	BMW	ALL,	
83 30 0 491 223	130 110	Sampkler tubes	BMW	ALL,	
83 30 0 491 424	212 130	Clutch alignment tool	BMW	ALL,	
83 30 0 491 457	231 000	Installer	BMW	ALL,	
83 30 0 491 519	231 370	Drift	BMW	ALL,	
83 30 0 491 633	240 050	Puller	BMW	ALL,	
83 30 0 491 705	242 300	Holder	BMW	ALL,	
83 30 0 491 799	251 100	Spanner wrench	BMW	ALL,	
88 88 6 313 150		Wrench	BMW	ALL,	
83 30 0 491 962	313 160	Wrench	BMW	ALL,	
83 30 0 492 222	333 107	Spindle	BMW	ALL,	
83 30 0 492 227	333 115	Bushing adapter	BMW	ALL,	
83 30 0 492 545	372 020	Pressuer adapters	BMW	ALL,	
83 30 0 492 796	612 010	Adapter cable	BMW	ALL,	
83 30 0 492 827	614 410	88 Pin break out box	BMW	ALL,	
83 30 0 493 063	641 110	Spanner socket	BMW	ALL,	
83 30 0 493 080	645 000	Puller	BMW	ALL,	
83 30 0 493 081	645 010	Pulley puller	BMW	ALL,	
83 30 0 493 082	645 020	Clutch holder	BMW	ALL,	
83 30 0 493 083	645 030	Extractor	BMW	ALL,	
83 30 0 493 084	645 040	Installer	BMW	ALL,	
83 30 0 493 085	645 060	installer	BMW	ALL,	
83 30 0 493 088	645 090	A/C clamp	BMW	ALL,	
83 30 0 493 093	652 000	Antenna wrench	BMW	ALL,	
88 88 6 004 220		Valve guide reamer set	BMW	ALL,	
83 30 0 490 508	009 190	Pliers	BMW	ALL,	
83 30 0 490 515	009 250	Torque wrench	BMW	ALL,	
83 30 0 490 579	110 070	Engine hoist frame	BMW	ALL,	

Order P/N	6 digit P/N	Description	Brand	Series	SIB
83 30 0 490 604	110 192	Guide tube shaft	BMW	ALL,	
83 30 0 490 647	110 341	Valve spring depressor	BMW	ALL,	
83 30 0 490 648	110 342	Pressure lever	BMW	ALL,	
83 30 0 490 649	110 343	Valve spring hook	BMW	ALL,	
83 30 0 490 650	110 344	Valve spring compressor	BMW	ALL,	
83 30 0 490 651	110 345	Valve spring depressor	BMW	ALL,	
83 30 0 490 752	111 410	Alignment tool	BMW	ALL,	
83 30 0 490 811	112 016	Spindle	BMW	ALL,	
83 30 0 490 876	112 380	Seal puller	BMW	ALL,	
83 30 0 490 882	112 390	Seal installer	BMW	ALL,	
83 30 0 490 883	112 400	Tensioner block	BMW	ALL,	
83 30 0 490 884	112 410	Spacer	BMW	ALL,	
83 30 0 490 886	112 430	Camshaft insertion jig	BMW	ALL,	
83 30 0 490 887	112 440	Camshaft Jig	BMW	ALL,	
83 30 0 490 894	112 450	Crankshaft holder	BMW	ALL,	
83 30 0 490 895	112 460	Camshaft test jig	BMW	ALL,	
83 30 0 490 896	112 470	Alignment rods	BMW	ALL,	
83 30 0 490 970	113 310	Cam chain clips	BMW	ALL,	
83 30 0 490 982	113 390	Timing chain tensioner	BMW	ALL,	
83 30 0 490 992	113 420	Cam clips	BMW	ALL,	
83 30 0 490 993	113 430	Camshaft turning tool	BMW	ALL,	
83 30 0 490 994	113 440	Vibration damper fixture	BMW	ALL,	
83 30 0 490 995	113 450	Adapter block	BMW	ALL,	
83 30 0 490 996	113 460	Angle disc	BMW	ALL,	
83 30 0 491 011	114 110	Alignment studs	BMW	ALL,	
83 30 0 491 015	114 150	Drift	BMW	ALL,	
83 30 0 494 482	114 223	Chain tension spindle	BMW	ALL,	
83 30 0 491 058	115 130	Valve depressor	BMW	ALL,	
83 30 0 491 079	117 320	Oil jet adjuster	BMW	ALL,	
83 30 0 491 080	117 330	Oil pressure adapter	BMW	ALL,	
83 30 0 491 090	117 380	Torque block	BMW	ALL,	
83 30 0 491 133	121 200	Torque limiter	BMW	ALL,	
83 30 0 491 148	126 410	Adapter lead	BMW	ALL,	
83 30 0 491 160	127 040	Coil tester	BMW	ALL,	04 25 92
83 30 0 491 305	135 220	Fuel pressure adapter	BMW	ALL,	
83 30 0 491 310	135 270	Fuel pressuer adapter hose	BMW	ALL,	
83 30 0 491 374	161 150	Evap. system leak tester	BMW	ALL,	
83 30 0 491 946	313 010	Ride height measurment tool	BMW	ALL,	
83 30 0 492 824	613 100	Release tool	BMW	ALL,	
83 30 0 493 029	621 210	Adapter cable ZAE/BAE	BMW	ALL,	
99 00 0 001 410		Slack tube manometer	BMW	ALL,	
83 30 0 493 370	119 110	Camshaft alignment tool	BMW	ALL,	
83 30 0 492 719	611 145	Connector release tool	BMW	ALL,	
83 30 0 492 723	611 153	Relay release tool	BMW	ALL,	
83 30 0 490 968	113 292	Locking pin	BMW	ALL,	
83 30 0 491 025	114 220	Chain tensioner	BMW	ALL,	
83 30 0 491 018	114 180	T60 torx socket	BMW	ALL,	
83 30 0 490 892	112 445	Camshaft jig	BMW	ALL,	
83 30 0 490 893	112 446	Camshaft jig	BMW	ALL,	
83 30 0 490 903	113 040	Special Bolt	BMW	ALL,	
83 30 0 491 007	114 070	Assembly tool	BMW	ALL,	
83 30 0 491 285	135 060	Tool set	BMW	ALL,	
83 30 0 490 185	002 530	Measuring bridge	BMW	ALL,	
83 30 0 490 186	002 540	Injection nozzle tester	BMW	ALL,	
83 30 0 490 589	110 110	Engine plate	BMW	ALL,	
83 30 0 490 593	110 160	Compression gauge	BMW	ALL,	
88 88 6 930 207		Brake bleeder cap	BMW	ALL,	
83 30 0 491 316	135 300	Exhaust pick-up	BMW	ALL,	
83 30 0 491 391	170 009	Coolant tank test flange	BMW	ALL,	
83 30 0 490 913	113 090	Holding fixture	BMW	ALL,	
83 30 0 490 712	111 110	Pressure fixture	BMW	ALL,	
83 30 0 490 821	112 060	Guides	BMW	ALL,	
83 30 0 490 858	112 270	Assembly pliers	BMW	ALL,	
83 30 0 490 722	111 180	Spanner	BMW	ALL,	
83 30 0 490 746	111 380	Sleeve	BMW	ALL,	
83 30 0 490 819	112 040	Holder	BMW	ALL,	
83 30 0 490 912	113 080	Drift	BMW	ALL,	
83 30 0 490 928	113 120	Lever installer	BMW	ALL,	
83 30 0 490 937	113 140	Puller	BMW	ALL,	
83 30 0 491 073	117 010	Hose	BMW	ALL,	
83 30 0 491 254	132 010	Wrench	BMW	ALL,	
83 30 0 491 276	135 010	puller	BMW	ALL,	

Order P/N	6 digit P/N	Description	Brand	Series	SIB
83 30 0 491 277	135 020	Wrench	BMW	ALL,	
83 30 0 491 318	135 320	Socket	BMW	ALL,	
83 30 0 491 319	135 330	Gauge holder	BMW	ALL,	
83 30 0 491 320	135 340	Alignment pin	BMW	ALL,	
83 30 0 491 326	135 380	Adapter hose	BMW	ALL,	
83 30 0 490 673	111 030	Pressure test set	BMW	ALL,	
83 30 0 495 448	114 650	Oil filter wrench	BMW	ALL,	
83 30 0 490 761	111 430	Pressure fixture	BMW	ALL,	
83 30 0 490 774	111 450	Pressure fixture	BMW	ALL,	
83 30 0 490 135	002 040	Universal support	BMW	ALL,	
83 30 0 490 608	110 210	Valve board	BMW	ALL,	
83 30 0 490 584	110 080	Engine adapters	BMW	ALL,	
83 30 0 490 787	111 470	Head fixture	BMW	ALL,	
83 30 0 491 371	161 040	Spreading tool	BMW	ALL,	
83 30 0 492 588	511 130	Adjustment tool	BMW	ALL,	
83 30 0 491 313	135 280	Line plugs	BMW	ALL,	
83 30 0 490 083	000 208	Support feet	BMW	ALL,	
83 30 0 493 592	009 330	Adjustment Lever Set	BMW	ALL,	04 10 99
88 88 0 000 117		Compression stroke indicator	BMW	ALL,	
83 30 0 490 946	113 180	thrust lever	BMW	ALL,	
83 30 0 491 627	240 029	pressing adapter	BMW	ALL,	
83 30 0 491 727	244 090	seal installation tool	BMW	ALL,	
83 30 0 491 728	244 100	input shaft seal tool	BMW	ALL,	
83 30 0 491 729	244 110	spanner socket	BMW	ALL,	
83 30 0 491 657	240 190	flange holder	BMW	ALL,	
83 30 0 491 771	245 230	seal installer	BMW	ALL,	
83 30 0 491 791	246 000	8 pin test cable	BMW	ALL,	
83 30 0 492 628	513 058	filler strip tool	BMW	ALL,	
83 30 0 493 395	345 240	DSC III test cable	BMW	ALL,	04 06 00
83 30 0 494 018	361 080	M-mobility spanner	BMW	ALL,	04 19 01
83 30 0 493 840	212 180	SAC Centering Ring	BMW	ALL,	04 14 01
83 30 0 495 298	350 110	Brake pedal pivot Tool	BMW	ALL,	04 20 02
83 30 0 494 316		Thrust Bushing	BMW	ALL,	04 07 03
83 30 0 494 309	117 270	Pin spanner wrench	BMW	ALL,	04 07 03
83 30 0 494 318	119 476	Camshaft Securing Bracket	BMW	ALL,	04 07 03
83 30 0 494 505	131 340	Fuel Injector remover	BMW	ALL,	04 07 03
83 30 0 494 308	110 150	Engine support Bracket	BMW	ALL,	04 07 03
83 30 0 493 882	119 190	Flywheel Lock	BMW	ALL,	
83 30 0 494 001	248 100	Adapter hose	MINI	ALL,	24 01 02
83 30 0 494 774	541 240	Sunroof Torx Wrench	MINI	ALL,	04 01 04
83 30 0 494 867	324 154	Clamping bracket	BMW	ALL,	04 05 04
83 30 0 494 938	009 010	E18 Socket	BMW	ALL,	04 07 05
83 30 0 495 108	009 130	Magnetic connection 1/2	BMW	ALL,	04 07 05
83 30 0 495 071	110 290	Brace	BMW	ALL,	04 07 05
83 30 0 495 070	110 300	Alignment Pin	BMW	ALL,	04 07 05
83 30 0 494 999	114 250	Gauge	BMW	ALL,	04 07 05
83 30 0 495 003	114 270	R and amp; amp;R Fixture	BMW	ALL,	04 07 05
83 30 0 495 004	114 280	Camshaft Fixture	BMW	ALL,	04 07 05
83 30 0 495 026	114 420	T0 Torx Socket	BMW	ALL,	04 07 05
83 30 0 495 027	114 430	Hole Plug	BMW	ALL,	04 07 05
83 30 0 495 049	114 450	Fixture	BMW	ALL,	04 07 05
83 30 0 495 050	114 460	Camshaft bearing fixture	BMW	ALL,	04 07 05
83 30 0 495 110	115 190	T60 Torx socket	BMW	ALL,	04 07 05
83 30 0 495 028	119 017	Valve Spring Cage	BMW	ALL,	04 07 05
83 30 0 493 249	116 380	Seal Tool	BMW	ALL,	04 07 05
83 30 0 495 002	114 260	Oxygen sensor wrench	BMW	ALL,	04 07 05
83 30 0 495 048	114 440	Engine support fixture	BMW	ALL,	04 07 05
83 30 0 495 102	114 470	Cleaning set	BMW	ALL,	04 07 05
83 30 0 495 009	114 490	R and amp; amp; amp;R set	BMW	ALL,	04 07 05
90 88 6 110 320		R and R Bracket	BMW	ALL,	04 07 05
83 30 0 495 105	114 480	Storage board	BMW	ALL,	04 07 05
83 30 0 495 024	114 370	Compound press	BMW	ALL,	04 07 05
83 30 0 495 014	114 340	Pressure testing fixture	BMW	ALL,	04 07 05
83 30 0 495 018	114 350	Torque wrench	BMW	ALL,	04 07 05
83 30 0 495 008	114 290	Alignment Gauge	BMW	ALL,	04 07 05
90 88 6 114 360		R and R tool	BMW	ALL,	04 07 05
83 30 0 490 588	110 100	Engine adapter plate	BMW	ALL,	
83 30 0 490 591	110 130	Adapter plate	BMW	ALL,	
83 30 0 490 999	113 490	Reference gauge	BMW	ALL,	
83 30 0 491 056	115 100	Adapter with wrench	BMW	ALL,	
83 30 0 491 109	118 040	Engine Adapter Plate	BMW	ALL,	
83 30 0 491 264	133 065	Adapter	BMW	ALL,	

Order P/N	6 digit P/N	Description	Brand	Series	SIB
88 88 6 212 100		Mandrel	BMW	ALL,	
83 30 0 491 652	240 180	Support	BMW	ALL,	
83 30 0 493 156	242 310	Reverse gear tool	BMW	ALL,	
83 30 0 492 470	342 000	Brake wrench	BMW	ALL,	
83 30 0 493 099	655 400	Release tool	BMW	ALL,	
83 30 0 493 101		Tool Set	BMW	ALL,	
83 30 0 493 936	119 240	Oil Filter Cap Wrench	BMW	ALL,	04 17 05
83 30 0 495 126	115 320	Alignment pin	BMW	ALL,	
83 30 0 495 127	115 330	Seal Installer	BMW	ALL,	
83 30 0 495 115	115 210	Protective covers	BMW	ALL,	
83 30 0 495 116	115 220	Protective covers	BMW	ALL,	
83 30 0 495 118	115 240	Camshaft pres	BMW	ALL,	
83 30 0 495 119	115 250	Guide Pins	BMW	ALL,	
83 30 0 495 121	115 270	Seal Installer	BMW	ALL,	
83 30 0 495 122	115 280	Valve spring tool set	BMW	ALL,	
83 30 0 495 123	115 290	Asembly tool	BMW	ALL,	
83 30 0 495 128	115 340	Tool set	BMW	ALL,	
83 30 0 495 129	115 350	Timing chain retainer	BMW	ALL,	
83 30 0 495 130	115 360	Oil pressure adapter set	BMW	ALL,	
83 30 0 495 131	115 370	VANOS locking tool	BMW	ALL,	
83 30 0 495 132	115 380	VANOS gauge	BMW	ALL,	
83 30 0 495 133	115 390	Spark plug bore covers	BMW	ALL,	
83 30 0 495 134	115 400	VANOS torx T20	BMW	ALL,	
83 30 0 495 237	115 410	VANOS gauge	BMW	ALL,	
83 30 0 495 136	212 300	Clutch centering tool	BMW	ALL,	
83 30 0 495 138	234 100	Seal Installer	BMW	ALL,	
83 30 0 495 139	234 110	Seal installer	BMW	ALL,	
83 30 0 495 143	335 030	Seal installer	BMW	ALL,	
83 30 0 495 137	230 139	Tansmission support bracket	BMW	ALL,	
83 30 0 495 182	332 170	Bearing installer	BMW	ALL,	
83 30 0 495 183	332 180	Bearng installer	BMW	ALL,	
83 30 0 495 117	115 230	Pressure test fixture	BMW	ALL,	
83 30 0 493 933	119 200	Seal Puller	BMW	ALL,	04 26 05
83 30 0 493 940	119 280	Crankshaft Holder	BMW	ALL,	04 26 05
83 30 0 493 881	119 180	Seal Installer	BMW	ALL,	04 01 06
83 30 0 493 934	119 220	Seal remover	BMW	ALL,	04 01 06
83 30 0 493 935	119 230	Seal Installer	BMW	ALL,	04 01 06
83 30 0 493 971	119 340	Chain Tensioner	BMW	ALL,	04 01 06
83 30 0 495 187	002 300	Engine Stand	BMW	ALL,	04 06 06
83 30 0 495 196	002 320	Support Arm	BMW	ALL,	04 06 06
81 43 0 402 559		Helicoil Plus Thread Repair Kit	BMW	ALL,	
83 30 0 493 582	118 140	Assembly sleeve for Piston	BMW	ALL,	
83 30 0 419 271		Head Passage Cleaning Kit	BMW	ALL,	11 05 04
83 30 0 490 567	110 020	Engine lifting bar	BMW	ALL,	
83 30 0 493 421	230 200	41mm Socket	BMW	ALL,	04 09 06
83 30 0 491 101	118 000	Valve remover	BMW	ALL,	
83 30 0 495 072	110 320	R and R Bracket	BMW	ALL,	04 07 05
83 30 0 495 381	002 325	Engine support plate	BMW	ALL,	04 17 06
83 30 0 495 380	002 323	Engine support Arm	BMW	ALL,	04 17 06
83 30 0 495 576	115 160	Lift Latches	BMW	ALL,	04 20 06
83 30 0 495 577	115 170	Belt tensioner tool	BMW	ALL,	04 20 06
83 30 0 495 590	513 300	Window Adjustment Wrench	BMW	ALL,	04 22 06
83 30 0 495 560	121 220	Sparl plug socket	BMW	ALL,	04 30 06
83 30 0 495 739	118 550	Bearing Fixture	BMW	ALL,	04 30 06
83 30 0 495 751	118 620	WAF 10 Socket	BMW	ALL,	04 30 06
83 30 0 495 750	118 640	E 10 Torx	BMW	ALL,	04 30 06
83 30 0 495 753	118 660	Flywheel Holder	BMW	ALL,	04 30 06
83 30 0 495 755	130 180	Injector remover	BMW	ALL,	04 30 06
83 30 0 495 756	130 190	Assembly Set	BMW	ALL,	04 30 06
83 30 0 495 236	004 400	Torque Rotation-Angle Wrench	BMW	ALL,	04 41 06
83 30 0 495 256	004 410	Torque Rotation-Angle Wrench	BMW	ALL,	04 41 06
83 30 0 495 723	114 284	Fixture Screws M6	BMW	ALL,	04 21 06
83 30 0 495 727	118 520	Gauge	BMW	ALL,	04 21 06
83 30 0 495 728	118 530	Vacuum Pump Tool	BMW	ALL,	04 21 06
83 30 0 495 747	118 580	T60 Torx Socket	BMW	ALL,	04 21 06
83 30 0 495 749	118 610	WAF 5 Hex Socket	BMW	ALL,	04 21 06
83 30 0 495 752	118 650	Brace	BMW	ALL,	04 21 06
83 30 0 495 605	009 140	Rotation Angle Measuring Gauge	BMW	ALL,	04 25 06
83 30 0 495 726	118 510	Spray Jet Fixture	BMW	ALL,	04 25 06
83 30 0 495 736	118 540	Support Plate	BMW	ALL,	04 25 06
83 30 0 495 754	118 670	Clamp	BMW	ALL,	04 25 06
83 30 0 495 769	180 110	Gauge	BMW	ALL,	04 25 06

Order P/N	6 digit P/N	Description	Brand	Series	SIB
83 30 0 495 748	118 590	Connecting Rod Guides	BMW	ALL,	04 03 07
83 30 0 495 770	118 680	Adapter	BMW	ALL,	04 03 07
81 29 0 426 464		Turbocharger Diagnosis Tool	BMW	ALL,	04 04 07
83 30 0 493 973	119 360	Mandrel	BMW	ALL,	04 01 06
81 39 0 393 555		Battery Charger	BMW	ALL,	
83 30 0 495 597	242 354	Seal Removal Tool	BMW	ALL,	04 11 07
83 30 0 496 061	244 166	Converter Bracket	BMW	ALL,	04 11 07
83 30 0 495 598	244 350	E10 Torx Socket	BMW	ALL,	04 11 07
83 30 0 495 599	244 360	Seal Removal Tool	BMW	ALL,	04 11 07
83 30 0 495 600	244 370	Seal Installation Tool	BMW	ALL,	04 11 07
83 30 0 495 601	244 380	Seal Installation Tool	BMW	ALL,	04 11 07
83 30 0 495 602	244 390	Seal Removal Tool	BMW	ALL,	04 11 07
83 30 0 495 603	244 400	Seal Installation Tool	BMW	ALL,	04 11 07
83 30 0 490 973		Locking Pins	BMW	ALL,	
83 30 0 496 312	244 340	Fill plug tool	BMW	ALL,	
83 30 0 490 961	113 262	Holding bolts	BMW	ALL,	
83 30 0 494 464	136 030	Fuel Pressure adapter	BMW	ALL,	
83 30 0 491 690	241 290	Seal Installer wedges	BMW	ALL,	
83 30 0 495 120	115 260	Engine support plate	BMW	ALL,	
83 30 0 433 207		Evaporative System Test Adapter	BMW	ALL,	04 20 07
83 30 0 496 359	119 890	Gauge	BMW	ALL,	04 07 08
83 30 0 496 360	119 900	Chain tensioner	BMW	ALL,	04 07 08
83 30 0 496 365	118 090	Brace	BMW	ALL,	04 07 08
83 30 0 496 366	118 570	TDC Alignment tool	BMW	ALL,	04 07 08
83 30 0 496 369	118 920	Oil pump brace	BMW	ALL,	04 07 08
83 30 0 496 370	118 930	Engine Support	BMW	ALL,	04 07 08
83 30 0 496 408	118 080	Pressing-off Device	BMW	ALL,	04 07 08
83 30 0 496 287	002 326	Engine Support Plates	BMW	ALL,	04 03 08
83 30 0 496 288	002 327	Engine Support Plates	BMW	ALL,	04 03 08
81 39 0 428 957		Deutronic Battery Charger	BMW	ALL,	
83 30 0 496 263	119 640	Crossbar with support plate	MINI	ALL,	04 04 08
83 30 0 496 297	130 260	Fixture	MINI	ALL,	04 04 08
83 30 0 496 376	610 403	Electrical Tool	MINI	ALL,	04 03 08
83 30 0 496 107	118 730	Adapter	BMW	ALL,	
83 30 0 490 615	110 222	Test Probe	MINI	ALL,	04 01 08
90 88 6 114 490	114 490	R and R tool	BMW	ALL,	04 07 05
83 30 0 496 266	110 370	Front engine seal remover	BMW	ALL,	
83 30 0 495 574	612 250	V-adapter cable (3-pin)	BMW	ALL,	04 16 08
83 30 0 494 148	136 470	Adapter cable, 1-pin	BMW	ALL,	04 16 08
83 30 0 494 147	136 460	Adapter, 12-pin	BMW	ALL,	04 16 08
83 30 0 494 145	127 410	Adapter cable, 96-pin	BMW	ALL,	04 16 08
83 30 0 495 219	116 300	Gauge	BMW	ALL,	04 14 08
83 30 0 493 235	116 320	Locking Plug	BMW	ALL,	04 14 08
83 30 0 493 250	116 330	Guide Drifts	BMW	ALL,	04 14 08
83 30 0 493 248	116 370	Extraction tool	BMW	ALL,	04 14 08
83 30 0 493 232	135 190	Extractor	BMW	ALL,	04 14 08
83 30 0 493 387	110 236	Test Probe	BMW	ALL,	04 14 08
83 30 0 493 377	116 470	Holding Fixture	BMW	ALL,	04 14 08
83 30 0 493 380	116 480	Adapter	BMW	ALL,	04 14 08
83 30 0 493 381	116 490	Installer	BMW	ALL,	04 14 08
83 30 0 493 674	135 230	Injector Remover	BMW	ALL,	04 14 08
83 30 0 493 587	118 180	Holder	BMW	ALL,	04 14 08
83 30 0 493 758	135 210	Cleaning Set	BMW	ALL,	04 14 08
83 30 0 490 615	110 222	Test Probe	BMW	ALL,	04 14 08
83 30 0 490 797	111 960	Assembly Sleeves	BMW	ALL,	04 14 08
83 30 0 495 140	122 300	Pliers for releasing glow plug	BMW	ALL,	04 01 09
83 30 0 493 231	116 400	Pressure tool	BMW	ALL,	04 01 09
83 30 0 491 068	116 050	Socket wrench insert 10 mm A/F	BMW	ALL,	04 01 09
83 30 0 490 180	002 510	Dial Gauge with tracer plunger	BMW	ALL,	04 01 09
83 30 0 490 190	002 590	Plasitgage	BMW	ALL,	04 01 09
83 30 0 491 047	115 040	Open-ended wrench WAF 32	BMW	ALL,	04 01 09
83 30 0 494 379	119 015	Valve Spring Retainer	BMW	ALL,	04 01 09
83 30 0 493 465	135 410	Test Kit	BMW	ALL,	04 01 09
83 30 0 496 326	119 880	Pressure Tester Adapter	BMW	ALL,	
83 30 0 496 481	001 440	Spanner Socket WAF 15	BMW	ALL,	04 33 08
83 30 0 494 846	127 120	Alternator clutch holder	BMW	ALL,	
81 39 2 153 908		DEF Extraction Unit	BMW	ALL,	04 14 09
81 39 2 153 909		DEF Fill Unit	BMW	ALL,	04 14 09
83 30 0 496 565	135 160	Fuel Line Plugs	BMW	ALL,	04 16 09
83 30 0 495 496	244 320	Seal Removal Tool	BMW	ALL,	04 20 09
83 30 0 495 497	244 330	Seal Installer	BMW	ALL,	04 20 09
83 30 0 495 331	130 170	Extracting Tool	BMW	ALL,	04 19 09

Order P/N	6 digit P/N	Description	Brand	Series	SIB
83 30 0 492 621	513 051	Handle	BMW	ALL,	
83 30 0 496 373	115 420	Engine support plate	BMW	ALL,	
83 30 0 495 111	115 200	Spacer Ring	BMW	ALL,	
83 30 0 496 731	614 180	V-Adapter test Cable 48 Pin	BMW	ALL,	04 39 09
83 30 0 496 732	614 190	V-Adapter test Cable 58 Pin	BMW	ALL,	04 39 09
83 30 0 496 604	614 200	V-Adapter test Cable 11 Pin	BMW	ALL,	04 39 09
83 30 0 496 755	614 260	V-Adapter test Cable 11 Pin	BMW	ALL,	04 39 09
83 30 0 496 756	614 270	V-Adapter test Cable 24 Pin	BMW	ALL,	04 39 09
83 30 0 496 143	118 840	Valve Spring Basket	BMW	ALL,	
83 30 0 496 680	116 160	Engine Stand Support	BMW	ALL,	04 02 10
83 30 0 496 623	114 310	Pressure Adapter	BMW	ALL,	04 07 10
83 30 0 496 605	614 210	V-Adapter test Cable 12 Pin	BMW	ALL,	04 08 10
83 30 0 496 673	114 285	Camshaft Gauge	BMW	ALL,	04 05 10
83 30 0 496 661	117 170	Locking Key	BMW	ALL,	04 05 10
83 30 0 496 660	119 185	Seal Ring	BMW	ALL,	04 05 10
83 30 0 496 670	119 235	Seal Installer	BMW	ALL,	04 05 10
83 30 0 496 669	130 270	Injector Remover	BMW	ALL,	04 05 10
83 30 0 496 668	130 280	Injector Ring Kit	BMW	ALL,	04 05 10
83 30 0 496 672	117 100	Camshaft Tension Tool - Exhaust	BMW	ALL,	04 05 10
83 30 0 496 671	117 110	Intermediate Lever Tool	BMW	ALL,	04 05 10
83 30 0 496 658	118 564	Piston Retaining Clip Tool	BMW	ALL,	04 05 10
83 30 0 496 431	006 060	Support Feet	BMW	ALL,	
83 30 0 496 805	116 220	Cylinder Head Leak Tester	BMW	ALL,	
83 30 0 494 933	335 010	Spring Tensioner Rear Axle	BMW	ALL,	04 09 05
83 30 0 495 215	116 080	Alignment Pin	BMW	ALL,	
83 30 0 495 214	116 254	Mounting plate	BMW	ALL,	
83 30 0 495 216	119 266	Bushing	BMW	ALL,	
83 30 0 495 217	116 090	Mounting plate	BMW	ALL,	
83 30 0 495 274	116 110	R and R Tool	BMW	ALL,	
83 30 0 496 582	230 390	Slip Bushing	BMW	ALL,	04 18 10
83 30 0 496 583	230 400	Pin Wrench	BMW	ALL,	04 18 10
83 30 0 496 584	230 410	Seal Installer	BMW	ALL,	04 18 10
83 30 0 496 733	006 080	Engine suspension hook	BMW	ALL,	
83 30 0 496 484	172 060	Adapter	BMW	ALL,	04 20 10
83 30 0 496 485	172 070	Adapter (pipe diameter 15mm)	BMW	ALL,	04 20 10
83 30 0 496 486	172 080	Adapter (plastic pipes)	BMW	ALL,	04 20 10
83 30 0 440 139		Pressure relief button	BMW	ALL,	13 01 07
82 14 0 429 702		40 Micron Filter	BMW	ALL,	13 01 07
82 14 0 429 694		Quick Disconnect	BMW	ALL,	13 01 07
82 14 0 429 695		Quick Disconnect	BMW	ALL,	13 01 07
82 14 0 429 697		Braded Line	BMW	ALL,	13 01 07
82 14 0 429 698		EFI Quick Disconnect Fitting	BMW	ALL,	13 01 07
82 14 0 429 699		EFI Quick Disconnect	BMW	ALL,	13 01 07
82 14 0 429 700		Bottle and Plastic Beaker	BMW	ALL,	13 01 07
82 14 0 429 701		Applicator	BMW	ALL,	13 01 07
82 14 0 429 703		Clear Drain Hose Assembly	BMW	ALL,	13 01 07
82 14 2 155 163		High Pressure Hose	BMW	ALL,	
81 29 2 158 850		Turbocharger Diagnostic Tool Adapter	BMW	ALL,	04 15 10
83 30 0 495 334	110 330	V-Belt Installation Tool	BMW	ALL,	04 24 10
83 30 2 211 622		DMC Injector Scan Tool	BMW	ALL,	
83 30 0 496 646	114 410	Intake Wrench WAF46	BMW	ALL,	04 09 10
83 30 0 496 797	117 290	Turbocharger Covers	BMW	ALL,	04 09 10
83 30 0 496 820	117 430	Adapter	BMW	ALL,	04 09 10
83 30 0 496 383	119 895	Camshaft Lock	BMW	ALL,	04 09 10
83 30 0 496 942	117 440	Camshaft Lock	MINI	ALL,	04 01 11
83 30 0 496 941	117 460	Oil Pressure Adapter	MINI	ALL,	04 01 11
83 30 0 496 779	210 000	Drift	MINI	ALL,	04 06 10
83 30 0 496 831	210 010	Release Tool	MINI	ALL,	04 06 10
81 10 2 208 112		Laser Pointer	BMW	ALL,	04 05 07
83 30 0 495 157	115 261	Engine stand Adapter	BMW	ALL,	
83 30 0 493 980	118 220	Seal Protector	BMW	ALL,	04 18 11
83 30 0 496 707	130 290	Fuel Pressure Test Lines	BMW	ALL,	04 09 11
83 30 0 496 765	335 126	Removal Collar	BMW	ALL,	04 10 11
83 30 0 496 795	335 127	Insertion Collar	BMW	ALL,	04 10 11
83 30 0 496 958	230 330	Seal Installer	BMW	ALL,	
81 29 2 208 034		BMW Group Carbon Blaster	MINI	ALL,	04 03 11
83 30 0 496 707		Fuel Pressure Test Lines	MINI	ALL,	
83 30 0 495 944	119 610	Rear Seal Tool	MINI	ALL,	04 03 07
83 30 0 494 927	334 440	Rear Rubber Mount Installer	MINI	ALL,	04 08 07
83 30 2 209 377	117 470	Oil Pressure Test Adapter Lid	BMW	ALL,	04 14 11
81 29 2 208 032	810 026	Blasting Wand	MINI	ALL,	04 03 11
81 29 2 208 038	810 025	Extraction Adapter	MINI	ALL,	04 03 11

Order P/N	6 digit P/N	Description	Brand	Series	SIB
83 30 0 496 371	130 160	Socket wrench with adapter	BMW	ALL,	04 33 08
81 47 0 026 305		Z8 Protective Covers	BMW	ALL,	
83 30 0 496 939	007 300	Engine Harness Removal Tool	BMW	ALL,	04 22 10
83 30 2 214 015		V Adapter Cable DME	MINI	ALL,	04 08 11
81 39 2 158 576		Battery Charger	BMW	ALL,	
83 30 2 213 485		Oil Pump Adjustment Gauge	BMW	ALL,	04 15 11
83 30 2 496 885		Injector Remover	BMW	ALL,	04 13 11
83 30 2 212 822		Seal Tool	BMW	ALL,	04 13 11
83 30 2 212 823		Oil Pressure Test Adapter Lid	BMW	ALL,	04 13 11
83 30 2 212 825		Locating Pin	BMW	ALL,	04 13 11
83 30 2 212 827		Seal Tool	BMW	ALL,	04 13 11
83 30 2 212 830		VANOS Locking Tool	BMW	ALL,	04 13 11
83 30 2 212 831		Camshaft Locking Tool	BMW	ALL,	04 13 11
83 30 2 219 548		Alignment Pin	BMW	ALL,	04 13 11
83 30 2 212 829		Oil Spray Nozzle Fixture	BMW	ALL,	04 13 11
83 30 2 212 832		Engine Support	BMW	ALL,	04 13 11
83 30 2 212 824		Pressure Fixture	BMW	ALL,	04 13 11
83 30 0 493 937	119 250	Oil Filter Pressure Cap	BMW	ALL,	04 01 12
83 30 0 496 457	116 410	Pressure Adapter	BMW	ALL,	04 01 12
83 30 0 491 421	212 100	Mandrel	BMW	ALL,	
83 30 2 238 146		Diesel Exhaust Fluid Refractometer	BMW	ALL,	04 19 11
83 30 2 220 100		Electrical Contact Release Tool	BMW	ALL,	04 28 11
83 30 0 495 501	413 101	Glue Fixture	BMW	ALL,	
83 30 0 493 434	117 201	Open end wrench	BMW	ALL,	
83 30 0 495 019	114 360	Vacuum Pump Tool	BMW	ALL,	04 07 05
83 30 0 496 885	130 320	Injector Remover	BMW	ALL,	04 13 11
83 30 0 491 046	115 030	Holder	BMW	ALL,	
83 30 0 493 139	116 260	Mounting Sleeve	BMW	ALL,	
83 30 0 494 863	118 330	Insertion Tool	BMW	ALL,	
83 30 2 219 637		Seal Puller	BMW	ALL,	04 12 12
83 30 0 495 280	130 140	Injector Wrench	BMW	ALL,	04 13 12
83 30 2 222 742		Brace	BMW	ALL,	04 14 12
83 30 2 222 741		Brace	BMW	ALL,	04 14 12
83 30 0 496 752	130 300	Injector Remover Tool	BMW	ALL,	04 17 12
83 30 0 490 507	009 170	WAF24 Crows foot	BMW	ALL,	
83 30 2 318 428		T55 Torx Socket	BMW	ALL,	04 30 12
83 30 2 318 117		Brace	BMW	ALL,	04 30 12
83 30 0 493 931	119 500	Piston ring pliers	BMW	ALL,	
81 24 2 344 611		72.5mm Centering Ring for Wheel Balancer	MINI	ALL,	
83 30 0 495 373	116 240	Piston ring tool	BMW	ALL,	
83 30 2 320 871		EMF Resetting Tool	BMW	ALL,	04 01 13
83 30 2 249 117		Camshaft Gauge	BMW	ALL,	04 02 13
83 30 2 249 115		Adapter Plate	BMW	ALL,	04 02 13
83 30 2 249 164		Insertion Guide	BMW	ALL,	04 02 13
83 30 2 249 160		Removal Tool	BMW	ALL,	04 02 13
83 30 2 249 162		Camshaft Timing Tool	BMW	ALL,	04 02 13
83 30 2 249 161		Guide Pins	BMW	ALL,	04 02 13
83 30 2 249 166		Intermediate Lever Tool	BMW	ALL,	04 02 13
83 30 2 249 171		Turbocharger Installation Tool	BMW	ALL,	04 02 13
83 30 0 495 314	334 330	Radial Seal Installer	BMW	ALL,	
83 30 2 318 118		Magnetic Shim	BMW	ALL,	04 04 13
83 30 2 318 119		Plate	BMW	ALL,	04 04 13
83 30 2 303 793		Brace	BMW	ALL,	04 04 13
83 30 2 303 795		Radial Seal Adapter	BMW	ALL,	04 04 13
83 30 2 304 559		Thrust piece	BMW	ALL,	
83 30 2 304 560		Thrust piece	BMW	ALL,	
83 30 2 304 570		Holding Sleeve	BMW	ALL,	
83 30 2 304 572		Disc	BMW	ALL,	
83 30 2 304 575		Disc	BMW	ALL,	
81 64 2 344 000	P6 p6	R6 Adapter M24 63/75 mm	BMW	ALL,	
81 64 2 343 999	P5 p5	P5 Adapter 45/84 mm	BMW	ALL,	
83 30 2 210 778		Strut Mounting Tool - Complete	BMW	ALL,	04 27 11
83 30 0 496 145	118 870	Bolt M20X1	BMW	ALL,	04 11 13
83 30 0 496 111	118 750	Counterbalance Shaft Gauge	BMW	ALL,	04 11 13
83 30 2 318 115		Adapter	BMW	ALL,	04 11 13
83 30 0 496 112	118 760	Camshaft Gauge	BMW	ALL,	04 11 13
83 30 0 496 120	118 780	Alignment Plates	BMW	ALL,	04 11 13
83 30 0 496 142	118 850	Sensor Socket WAF 17	BMW	ALL,	04 11 13
83 30 0 496 139	118 830	Assembly Set	BMW	ALL,	04 12 13
83 30 0 496 117	118 770	Engine Support Arms	BMW	ALL,	04 12 13
83 30 2 318 429		Holding Device	BMW	ALL,	04 12 13
83 30 2 349 111		SCR Test Cable	BMW	ALL,	04 14 13

Order P/N	6 digit P/N	Description	Brand	Series	SIB
83 30 0 496 127	118 800	Seal Installation Tool	BMW	ALL,	04 15 13
83 30 0 493 940	119 280	Crankshaft Holder	MINI	ALL,	
83 30 0 493 971	119 340	Chain Tensioner	MINI	ALL,	
83 30 0 496 888		DDE 7.2.1 Test Cable	BMW	ALL,	04 17 13
83 30 0 496 123	118 790	Crankshaft Alignment Gauge	BMW	ALL,	04 18 13
83 30 2 348 135		Rapid Cool Down Tool - RCD	BMW	ALL,	04 01 14
83 30 2 350 531		DSC Test Cable	BMW	ALL,	
83 30 2 354 545		Diagnostic Ground Cable	BMW	ALL,	
83 30 2 348 527		Wiper Arm Remover	BMW	ALL,	
83 30 2 355 443		Tension Strap	BMW	ALL,	
83 30 2 285 573		Pin Wrench	BMW	ALL,	
83 30 2 285 574		Reset Tool	BMW	ALL,	
83 30 2 355 965		Strut Socket SW16	BMW	ALL,	
83 30 2 355 966		Strut Hex Wrench SW5	BMW	ALL,	
83 30 2 357 541		Magnetic Socket SW10	BMW	ALL,	
83 30 2 356 858		Battery Module Lifting Frame	BMW	ALL,	04 04 14
83 30 2 357 269		Shackle (3)	BMW	ALL,	
83 30 2 357 270		Eye Bolt (4)	BMW	ALL,	
83 30 2 286 332		Eye Bolt	BMW	ALL,	
83 30 0 493 423	230 220	Impact bushing	BMW	E90,	
81 22 2 352 494		Hex Socket	BMW	ALL,	
81 22 2 357 465		Hooked Wrench	BMW	ALL,	
83 30 2 356 862		Window Depth Measurement Kit	BMW	ALL,	
83 30 2 355 745		Scratch Depth Gauge	BMW	ALL,	
83 30 2 351 398		Window adjuster	BMW	ALL,	
81 29 2 356 966		Vacuum Adapter-Swirl Port	BMW	ALL,	04 03 14
81 29 2 356 967		Vacuum Adapter - Tangential	BMW	ALL,	04 03 14
81 29 2 356 969		Blasting Wand - Tangential Swirl Port	BMW	ALL,	04 03 14
81 29 2 356 970		Blasting Wand - Swirl PortStraight Outlet	BMW	ALL,	04 03 14
83 30 2 352 494		Hex Socket	BMW	ALL,	
83 30 2 357 465		Hooked Wrench	BMW	ALL,	
83 30 2 355 435		Bushing Spacer	BMW	ALL,	04 11 14
83 30 2 355 440		Bushing Adapter	BMW	ALL,	04 11 14
83 30 2 355 442		Nut and Spindle	BMW	ALL,	04 11 14
83 30 2 355 436		Bushing Spacer	BMW	ALL,	04 11 14
83 30 2 355 439		Bushing Adapter	BMW	ALL,	04 11 14
83 30 2 355 246		Bushing Sleeve	BMW	ALL,	04 11 14
83 30 2 355 438		Bushing Spacer	BMW	ALL,	04 11 14
83 30 2 355 441		Bushing Adapter	BMW	ALL,	04 11 14
83 30 2 286 319		Lifting Brackets	BMW	ALL,	04 11 14
83 30 2 357 222		Mandrel Support	BMW	ALL,	04 11 14
83 30 2 357 221		Support Plates	BMW	ALL,	04 11 14
83 30 2 356 938		Storage Tray	BMW	ALL,	04 11 14
83 30 2 353 250		End of Service Test Kit	BMW	ALL,	
83 30 2 297 982		Crankshaft Alignment Pin	BMW	ALL,	04 10 14
83 30 0 401 554	114 661	Oil Filter Wrench	BMW	ALL,	04 10 14
83 30 0 401 594		Piston Ring Tool	BMW	ALL,	04 10 14
83 30 2 285 548		Case Separation Screws	BMW	ALL,	04 10 14
83 30 2 285 546		Seal Installer	BMW	ALL,	04 10 14
83 30 2 355 626		Bushing Spacer	BMW	ALL,	04 13 14
83 30 2 355 719		Support Extractor	BMW	ALL,	04 13 14
83 30 2 288 986		Strap Guard	BMW	ALL,	04 13 14
83 30 2 285 545		Guide Pins	BMW	ALL,	04 13 14
83 30 2 286 313		Engine Stand Adapter	BMW	ALL,	04 13 14
83 30 2 286 315		Installation Fixture	BMW	ALL,	04 18 14
83 30 2 357 744		Compression Adapter	BMW	ALL,	04 18 14
83 30 2 285 547		O-Ring Tool	BMW	ALL,	04 18 14
83 30 2 287 951		6 Pin Test Cable	BMW	ALL,	04 18 14
83 30 2 357 900		Seal Installer	BMW	ALL,	04 16 14
83 30 2 288 380		Locking Pin	BMW	ALL,	04 16 14
83 30 2 358 464		Seal Installer	BMW	ALL,	04 16 14
83 30 2 358 465		Seal Installer	BMW	ALL,	04 16 14
83 30 2 358 818		Seal Installer	BMW	ALL,	04 16 14
83 30 2 353 365		Wiring Harness	BMW	ALL,	04 17 14
83 30 2 357 969		Target Gauge	BMW	ALL,	04 17 14
83 30 2 356 849		Lifting Brackets	BMW	ALL,	04 17 14
83 30 2 288 281		Test Cable 6-Pin	BMW	ALL,	04 17 14
83 30 2 352 734		Test Cable 15-Pin	BMW	ALL,	04 17 14
83 30 2 352 718		Test Cable 33-Pin	BMW	ALL,	04 17 14
83 30 2 353 364		I01 Wiring Harness	BMW	ALL,	
83 30 2 359 966		Cable Strap Pliers	BMW	ALL,	04 19 14
83 30 2 289 603		Oil Pressure Adapter Cap	BMW	ALL,	04 21 14

Order P/N	6 digit P/N	Description	Brand	Series	SIB
83 30 2 359 109		Torx Bit	BMW	ALL,	04 21 14
83 30 2 288 943		Striking Tool	BMW	ALL,	
83 30 2 288 159		Holding Tool	BMW	ALL,	04 23 14
83 30 2 357 904		Alignment Gauge	BMW	ALL,	04 23 14
83 30 2 360 215		Seal Adapter	BMW	ALL,	04 23 14
83 30 2 360 895		Pin Wrench	BMW	ALL,	04 23 14
83 30 2 360 075		High Voltage Battery Support	BMW	ALL,	04 24 14
83 30 2 360 067		Support Pins	BMW	ALL,	04 24 14
83 30 2 356 949		Support Brackets	BMW	ALL,	04 25 14
83 30 2 358 630		Support Adapter	BMW	ALL,	04 25 14
81 49 2 288 435		Protective Cover	BMW	ALL,	04 25 14
83 30 2 359 261		Protective Cover	BMW	ALL,	04 26 14
83 30 2 348 293		Open End Spanner	BMW	ALL,	04 26 14
83 30 0 491 012		Locking Tool	BMW	ALL,	04 28 14
83 30 2 288 154		Circlip Pliers	BMW	ALL,	04 30 14
83 30 2 318 573		Gas cap adapter	BMW	ALL,	
83 30 0 491 919	312 151	Sleeve	MINI	ALL,	
83 30 0 491 142	122 100	WAF12 socket	BMW	ALL,	
83 30 2 359 107		Support Washers	BMW	ALL,	04 02 15
83 30 2 358 022		Distance Gauge	BMW	ALL,	04 02 15
83 30 2 361 317		Seal Installer	BMW	ALL,	04 02 15
83 30 2 288 357		Adapter Plate	BMW	ALL,	04 02 15
83 30 2 358 482		AC System Flushing Adapter Kit	BMW	ALL,	04 01 15
83 30 2 360 072		HV Battery Cell Module Tool	BMW	ALL,	04 03 15
83 30 2 358 459		N63T Engine Seal Plugs	BMW	ALL,	04 04 15
83 30 0 495 325	130 200	Fuel flow Gauge	BMW	ALL,	
83 30 2 358 022		Distance Gauge	MINI	ALL,	04 01 15
83 30 2 288 943		Striking Tool	MINI	ALL,	04 01 15
83 30 2 288 357		Adapter Plate	MINI	ALL,	04 01 15
83 30 2 358 417		Injector Tool	MINI	ALL,	04 12 14
83 30 2 359 088		Torsion Spring Tool	MINI	ALL,	04 12 14
83 30 2 288 054		Counterbalance Fixture	MINI	ALL,	04 12 14
83 30 2 359 089		Fixture	MINI	ALL,	04 04 15
83 30 2 361 215		Pressure Test Fixture	MINI	ALL,	04 04 15
83 30 2 360 081		Lifting frame	BMW	ALL,	
83 30 2 153 002	123 620	Ignition Coil Puller	BMW	ALL,	04 08 15
83 30 2 336 647		HV Dummy Plug	BMW	ALL,	04 09 15
83 30 2 360 051		Window Adjustment Tools	BMW	ALL,	04 10 15
83 30 2 360 213		Strut Socket & SW18	BMW	ALL,	04 12 15
83 30 2 359 088		Torsion Spring Tool	BMW	ALL,	04 11 15
83 30 2 359 089		Fixture	BMW	ALL,	04 11 15
83 30 2 359 747		Punch Tool for Front Camera	BMW	ALL,	04 14 15
81 34 2 286 910		Oil Gun Compressor Oil	BMW	ALL,	
83 30 2 408 268		N63 Valve Seal Replacement Kit	BMW	ALL,	04 15 15
83 30 2 286 572		Tool Set	BMW	ALL,	
83 30 0 496 926	119 030	Engine Support	BMW	ALL,	
83 30 2 232 316		Gasket Tool	BMW	ALL,	
83 30 2 286 737		Evaporator Leak Test Adapter	BMW	ALL,	04 20 15
83 30 2 408 638		LVDS Test Cable	BMW	ALL,	
83 30 2 408 639		LVDS test cable	BMW	ALL,	
83 30 0 496 146	118 880	Diesel compression adapter	BMW	ALL,	
83 30 2 364 829		Protective Insert	BMW	ALL,	04 28 15
83 30 2 364 828		Centering Ring	BMW	ALL,	04 28 15
83 30 2 358 309		Door Support	BMW	ALL,	
83 30 2 406 729		Pressure Adapter	BMW	ALL,	
83 30 0 496 701	117 220	Holder	BMW	ALL,	
83 30 2 353 281		Measurement Aid	BMW	ALL,	
83 30 2 354 985		Riveting tool set	BMW	ALL,	
83 30 2 354 194		Plate	BMW	ALL,	
83 30 2 359 333		Screw	BMW	ALL,	
83 30 2 364 787		Pliers	BMW	ALL,	
83 30 2 407 586		Connection	BMW	ALL,	
83 30 2 408 958		Fitting Aid	BMW	ALL,	
83 30 2 409 248		Fixture	BMW	ALL,	
83 30 0 493 247	116 360	Seal Remover	BMW	ALL,	
83 30 0 496 589	116 120	Turbo Alignment Tool	BMW	ALL,	
83 30 2 297 983		Tensioning Tool	BMW	ALL,	04 10 14
83 30 2 288 280		2-pin test cable	BMW	ALL,	04 13 14
83 30 2 285 501		N20 Engine Seal Plugs	BMW	ALL,	04 21 15
83 30 0 493 379		Injector Puller Claw	BMW	ALL,	
83 30 0 496 656	117 190	Head sealing tool	BMW	ALL,	
83 30 2 360 227		Spray Nozzle Gauge	BMW	ALL,	04 43 15